

SRU 5040/05

---

Instructions for use

---

 
**Quick, Clean & Easy Setup**  
[www.philips.com/urc](http://www.philips.com/urc)

---



**PHILIPS**



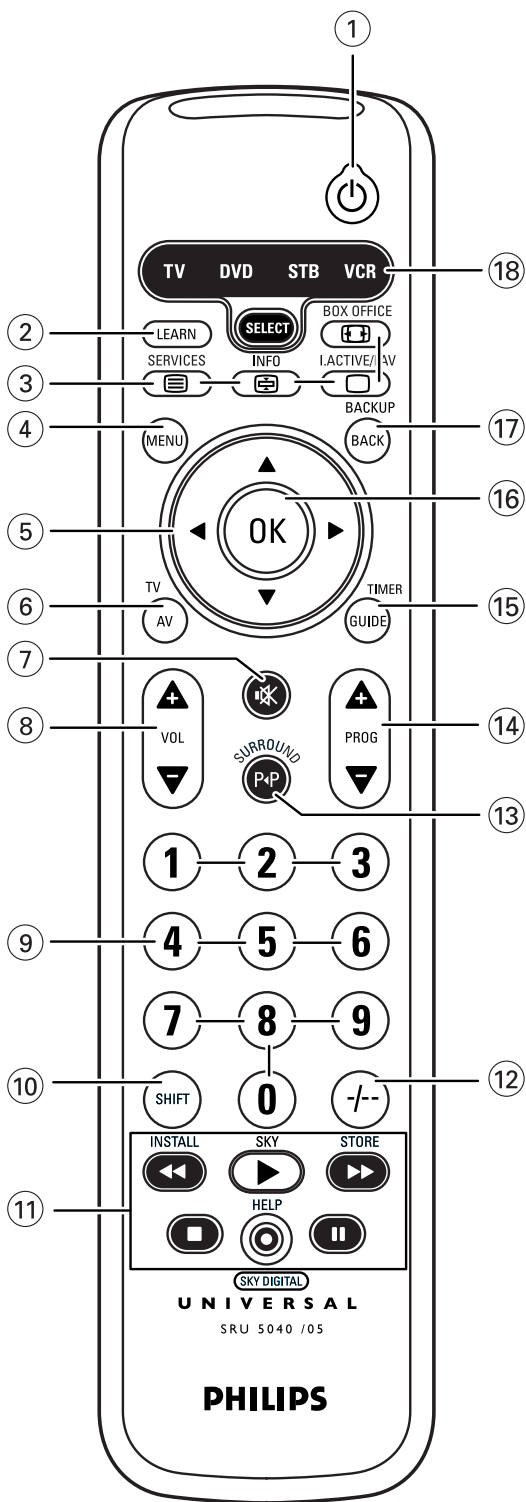

## Contents

<b>1. Introduction</b>	4
<b>2. Installing the remote control</b>	4-7
Inserting the batteries	4
Testing the remote control	4-5
Setting the remote control	5-7
<b>3. Keys and functions</b>	7
<b>4. Extra possibilities</b>	8-10
Adjusting device selection (Mode-selector)	8
Adding a remote control function	8
Learn a key	9
Restoring the original remote control settings	9-10
<b>5. Troubleshooting</b>	10
<b>6. Need help?</b>	10
Code list of all brands / equipment	11-32
Information to the Consumer	34

 
## 1. Introduction

Congratulations on your purchase of the Philips SRU 5040 universal remote control. After installing the remote control you can operate a maximum of 4 different devices with it: TV, DVD player/recorder, video recorder and STB (settop box, satellite or cable decoder). You can find information about how to prepare this remote control for use in the chapter 'Installing the remote control'.

## 2. Installing the remote control

### Inserting the batteries

- 1 Press the cover inwards and slide it in the direction of the arrow.
- 2 Place two AAA type batteries into the battery compartment, as shown.
- 3 Slide the cover back and click it firmly into place.

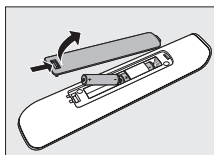

*Note: If the device indicators in the selector window (TV, DVD, STB and VCR) blink four times after every key press, the remote control is indicating that its batteries are running low. Replace the old batteries with two new AAA batteries.*

### Testing the remote control

The remote control has been programmed to operate most Philips devices. Because the SRU 5040 may use different signals for each brand and even for different models of the same brand, it is advisable to test whether your device responds to the SRU 5040. The example below (TV) instructs you how to do this. You can repeat the same steps for other devices (DVD player/recorder, video recorder, etc.) which you want to operate using the SRU 5040.



Example of TV:

- 1 Turn your TV on manually or use the original remote control.  
Tune to channel 1.

- 2 Press the SELECT key to select TV.  
Press the key until TV lights up in the selector window.

*If TV does not light up, check whether the batteries are properly inserted (see 'Inserting the batteries').*

- 3 Check whether all keys are working.  
For an overview of the keys and their functions see '3. Keys and functions'.
- If the TV responds as it should to all of the key commands the SRU 5040 is ready for use.

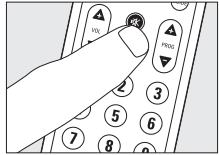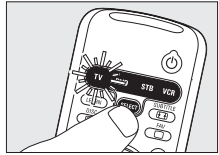

- ***If the device does not respond at all or not to all of the key commands, follow the instructions under 'Setting the remote control', or for online setup go to: [www.philips.com/urc](http://www.philips.com/urc).***

## Setting the remote control


This is only necessary if your device does not respond to the SRU 5040. If that is the case, the SRU 5040 does not recognize the brand and/or model of your device and you need to program the remote control to do so. The example below (TV) instructs you how to do this. You can repeat the same steps for other devices (DVD player/recorder, video recorder, etc.) which you want to operate using the SRU 5040.

### Automatically setting the remote control

The remote control will now automatically search for the right code for your device.

Example of TV:

- 1 Make sure the TV is switched on and select a channel using the original remote control or the keys on the TV (for example channel 1).
- If the device is a DVD player/recorder or video recorder, insert a disk or tape and start playback.
- 2 Press the SELECT key to select TV.  
Press the key until TV lights up in the selector window.

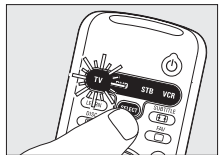


- 3 Then keep keys 1 and 3 pressed simultaneously for five seconds until TV in the selector window flashes twice and then remains lit.



- 4 Press and hold the Standby key of the SRU 5040.



- The SRU 5040 now starts emitting all known 'TV off' signals, one by one.  
Each time a code is sent, TV in the selector window lights up.

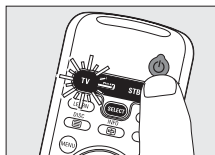

- 5 When your TV switches off (stand-by), release the Standby key of the SRU 5040 immediately.
- The SRU 5040 has now found a code that works on your TV.
- 6 Check if you can operate all functions on your TV with the SRU 5040.


- **If this is not the case, you can redo the automatic setting.  
The SRU 5040 will then search for a code that works better.**

- After the SRU 5040 has run through all the known codes, the search will stop automatically and TV in the selector window will stop flashing.
- Automatic programming of a TV takes a maximum of 5 minutes.  
For DVD, VCR and STB this time is 2 minutes

## Manually setting the remote control

Example of TV:

- 1 Turn on the TV manually or use the original remote control.  
Tune in to channel 1.
- 2 Look up the brand of your TV in the code list at the back of this manual. One or more four-figure codes are shown for each brand. Note the first code.  
*Be careful! There are separate tables for TV, video, DVD, etc.*

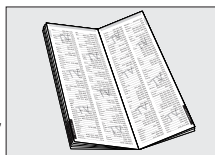

On our website [www.philips.com/lurc](http://www.philips.com/lurc) you can directly select your device typenumber to find the right code.

Make sure you use the codes from the correct table.

- 3 Press the SELECT key to select TV.  
Press the key until TV lights up in the selector window.



- 4 Keep keys 1 and 3 pressed simultaneously for five seconds until TV in the selector window flashes twice and then remains lit.












- 5 Then enter the code noted in step 2 using the digit keys.
- TV in the selector window will now flash twice.  
If TV flashes once for an extended period, the code has not been entered properly or the wrong code has been entered.  
Start again from step 2.
- 6 Point the SRU 5040 at the TV and check that it responds as it should.
- If the TV responds to all of the key commands, the SRU 5040 is ready for use. Do not forget to note your code.

- **If the device does not respond at all, or not to all of the key commands, start again from step 2 and try the next code from the list.**


 

 







### 3. Keys and functions

The illustration on page 3 gives an overview of all keys and their functions.

- ① **Standby** ..... switches TV, VCR, DVD or STB on or off.
- ② **LEARN** ..... switches the SRU 5040 into learning mode.
- ③  ..... - teletext on/off (  );  
   .....  
 - text off (  );  
 - wide screen TV (  );  
 - text hold (  ).
- ④ **MENU** ..... turns the menu on and off.
- ⑤ **Cursor keys** ..... cursor up, down, left, right in a menu.
- ⑥ **AV** ..... switches between external inputs of your equipment.
- ⑦  ..... mutes the sound of the TV.
- ⑧ **-VOL +** ..... adjusts the TV volume.
- ⑨ **Digit keys** ..... direct choice of channels and other functions.
- ⑩ **SHIFT** ..... for extra functions. When pressed at the same time as a second key, the second key will get another function. All blue labelled keys can be used together with SHIFT. For example:  
**SHIFT + INSTALL** . installs your TV  
**SHIFT + STORE** ... stores TV settings

Try out other combinations with the SHIFT-key on your device in order to find out which functions are available.

Only functions featured on the original remote control are available.

- ⑪  ..... - red teletext key.  
 ..... - rewind (VCR/DVD).  
 ..... - index.  
 ..... - play (VCR/DVD).  
 ..... - blue teletext key.  
 ..... - wind (VCR/DVD).  
 ..... - green teletext key.  
 ..... - stop (VCR/DVD).  
 ..... record.  
 ..... - yellow teletext key.  
 ..... - pause (VCR/DVD).
- ⑫ **-/--** ..... selects between one- and two-figure channel numbers.
- ⑬ **PP / SURROUND** .. - selects previous programme/channel.  
 - selects surround modes.
- ⑭ **- PROG +** ..... selects a previous or following channel.
- ⑮ **GUIDE** ..... opens electronic TV program guide (STB).
- ⑯ **OK** ..... confirms your selection.
- ⑰ **BACK** ..... jumps back one level in the menu or turns off the menu.
- ⑱ **SELECT** ..... selects TV, DVD, STB or VCR mode.

**If the device does not respond at all, or not to all of the key commands, follow the instructions under 'Setting the remote control'. It is possible that you must enter another code for the device.**



## 4. Extra possibilities

### Adjusting device selection (Mode selector)

The SRU 5040 is default set for operating TV, VCR, STB (settop box, satellite or cable decoder) and DVD. You can select the device you wish to operate with the SELECT key (mode selector). Each option allows operation of one device only. If desired, you can program the SELECT key (mode selector) to select a different kind of device. For example, if you want to operate a second TV.

In the following example you will see how to configure the STB mode for a second TV.

- 1** Switch on the second TV.
- 2** Press the SELECT key to select STB.  
Press the key until STB lights up in the selector window.
- 3** Then keep keys 1 and 6 on the SRU 5040 pressed **simultaneously for five seconds**, until STB in the selector window lights up.
- 4** Press keys 9, 9 and 2, in that order.
- 5** Press the SELECT key to select TV.  
Press the key until TV lights up in the selector window.
- 6** Press the 1 key.  
– STB in the selector window flashes twice.  
STB will now allow you to operate your second TV.
- 7** Program the SRU 5040 to operate the second TV.  
See 'Setting the remote control'.

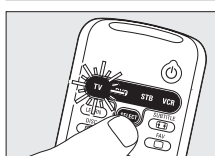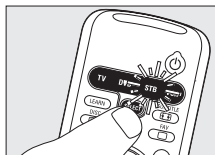

### Adding a function to the remote control

If you want to add a function to the SRU 5040, you can contact the Philips service line for Universal Remote Control to ask for the 5-figure code for the extra function.






## Learn a key

If you miss certain functions from your original remote control on the SRU 5040, the SRU 5040 can learn these functions from the original remote control. You can store a function under any of the available keys on the SRU 5040, except LEARN, SELECT and SHIFT. Please, note that any function already stored under a key will be deleted.

### Example for VCR:

Make sure you have the original VCR remote control at hand.

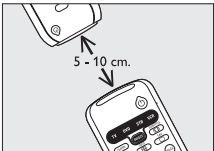- 1 Select the device mode VCR, with the SELECT key.
 
- 2 Press the LEARN key and the target key on the SRU 5040 **simultaneously for 5 seconds**, until VCR in the selector window blinks twice and then remains lit.
 
- 3 Place both remote controls on a flat surface (like a coffee table) and aim them head-to-head with about 5 - 10 cm in between.
 
- 4 Press the button you want to copy on the original remote control.
  - If the SRU 5040 has learned the code, VCR in the selector window blinks twice to confirm the signal is stored.
  - If VCR blinks once for a longer period, the IR signal is not learned by the SRU 5040. Please, try a few times and make sure the remote controls are aligned as described in step 3.

If the SRU 5040 cannot learn the code after several times trying, it is possible that:

- The IR signal of your original device is out of range (the SRU 5040 can only learn IR signals with a carrier signal of 30-60kHz).
- The memory of the SRU 5040 is full.
- The SRU 5040 stopped the learning process after 20 seconds if no IR signals are found. Check if your original remote control is working correctly.

## Restoring the original functions of your remote control

- 1 Keep keys 1 and 6 on the SRU 5040 pressed **simultaneously for five seconds**, until one of the device indicators (TV, DVD, STB, VCR) lights up in the selector window.



- 2** Press keys 9, 8 and 1, in that order:
  - The device indicator in the selector window flashes twice. All original functions have now been restored and any extra functions have been deleted.



## 5. Troubleshooting

- Problem
- Solution
- The device indicators in the selector window (TV, DVD, STB and VCR) blink four times after every key press.
  - *The remote control is indicating that its batteries are running low. Replace the old batteries with two new AAA batteries.*
- The device you want to operate does not respond and it's indication in the selector window does not flash when you press a key.
  - *Replace the old batteries with two new AAA batteries.*
- The device you want to operate does not respond but it's indication in the selector window does flash when a key is pressed.
  - *Point the SRU 5040 at the device and make sure that there are no obstructions between the SRU 5040 and the device.*
- The SRU 5040 does not respond properly to commands.
  - *Maybe you are using the wrong code. Try programming the SRU 5040 again using another code, which is mentioned under the brand of your device, or reset for automatic search to find the right code. If the device still does not respond, call our helpline.*
- The Teletext keys do not work.
  - *Find out whether your TV is equipped with Teletext.*
- You have difficulties operating all of the functions on your device.
  - *Maybe the SRU 5040 has to be adapted to the model of the device. Call our helpline for details.*
- Your brand of device is not in the code list.
  - *Try to set the SRU 5040 automatically. See 'Automatically setting the remote control'.*
- None of the codes works during manual setting of the remote control.
  - *If that is the case, follow the instructions under 'Automatically setting the remote control'.*

## 6. Need help?

If you have any questions about the SRU 5040, you can always contact us. You will find our contact details after the code list at the back of this manual. Read this manual carefully before you make a call. You can solve most of the problems yourself. If you cannot find any answers to your problems, write down the details of your device shown in the code list at the back of this manual. This will help our operators to assist you better and more quickly. Look up the numbers of the models in the instructions accompanying the device or on the back of your device. When you call our helpline, make sure the device is to hand so that our operators can help you determine whether your remote control is working properly. The model number of your Philips universal remote control is SRU 5040/05.

Date of purchase: ...../...../.....  
(day/month/year)

## SETUP CODES FOR TV

A.R.Systems . . . . . 0064, 0583, 0401, 0482  
 Accent . . . . . 0064, 0583, 0036  
 Accuphase . . . . . 0583  
 Acura . . . . . 0583, 0064, 0036  
 Adcom . . . . . 0652  
 Addison . . . . . 0135, 0680  
 Admiral . . . . . 0114, 0120, 0190, 0390  
 Adyson . . . . . 0243, 0244  
 Agashi . . . . . 0243, 0244  
 Agazi . . . . . 0243  
 AGB . . . . . 0543  
 Agef . . . . . 0114  
 Aiko . . . . . 0243, 0036, 0398, 0099, 0062  
 . . . . . 0388, 0218, 0244, 0243  
 Aim . . . . . 0064, 0099, 0583, 0482  
 . . . . . 0733, 0832  
 Aiwa . . . . . 0728, 1943  
 Akai . . . . . 0036, 0062, 0064, 0099, 0190  
 . . . . . 0218, 0243, 0244, 0245, 0378, 0388  
 . . . . . 0398, 0475, 0500, 0507, 0543, 0575  
 . . . . . 0579, 0583, 0633, 0658, 0729, 0741  
 . . . . . 0742, 0839, 1564  
 Akashi . . . . . 0036  
 Akiba . . . . . 0064, 0245, 0309, 0321, 0482  
 . . . . . 0583  
 Akira . . . . . 0445  
 Akito . . . . . 0064, 0583  
 Akura . . . . . 0036, 0064, 0245, 0303, 0309  
 . . . . . 0386, 0695, 0741, 1064  
 Alaron . . . . . 0243  
 Alba . . . . . 0036, 0063, 0064, 0190, 0243  
 . . . . . 0245, 0262, 0274, 0382, 0398, 0445  
 . . . . . 0458, 0514, 0695, 0741, 1064, 0583  
 Alcyon . . . . . 0103  
 Allorgan . . . . . 0233, 0244, 0321  
 Allstar . . . . . 0064, 0583  
 Ambassador . . . . . 0204  
 Amplivision . . . . . 0244, 0397, 0427  
 Amstrad . . . . . 0036, 0064, 0204, 0245, 0398  
 . . . . . 0543, 1064, 0583  
 Anam . . . . . 0036  
 Anam National . . . . . 0677  
 Anex . . . . . 0448  
 Anglo . . . . . 0036  
 Anitech . . . . . 0036, 0064, 0103, 0309, 0583  
 Ansonic . . . . . 0397, 0064, 0036, 0695, 0401  
 . . . . . 0190, 0319, 0286, 0274, 0455, 0319  
 . . . . . 0131, 1464  
 AOC . . . . . 0036, 0120, 0135  
 Apollo . . . . . 0500  
 Arc en Ciel . . . . . 0426, 0136, 0595, 0223  
 . . . . . 0528  
 Arcam . . . . . 0243, 0244  
 Ardem . . . . . 0064, 0741  
 Aristona . . . . . 0064, 0583  
 ART . . . . . 1064  
 Arthur Martin . . . . . 0427, 0190, 0264  
 ASA . . . . . 0132, 0373, 0114, 0131  
 Asberg . . . . . 0064, 0583, 0103  
 Asora . . . . . 0036

Astra . . . . . 0064  
 Asuka . . . . . 0245, 0244, 0309  
 Atlantic . . . . . 0064, 0583, 0233  
 Atori . . . . . 0036  
 Auchan . . . . . 0427, 0190  
 Audiosonic . . . . . 0064, 0583, 0244, 0401  
 . . . . . 0397, 0741, 0364, 0742, 0245, 0513  
 . . . . . 0455, 0036, 0136, 0847  
 Audioton . . . . . 0244, 0455, 0513  
 Ausind . . . . . 0103  
 Autovox . . . . . 0103, 0114, 0233, 0244, 0264  
 . . . . . 0274  
 AWA . . . . . 0038, 0063, 0064, 0583, 0243  
 . . . . . 0244, 0135, 0036, 0401, 0633  
 Axxent . . . . . 0036  
 Axxon . . . . . 0741  
 Ayomi . . . . . 0265  
 Baihe . . . . . 0036  
 Baile . . . . . 0036, 0401  
 Baird . . . . . 0099, 0220, 0244, 0136  
 Bang & Olufsen . . . . . 0114, 0592  
 Baosheng . . . . . 0036  
 Barco . . . . . 0190, 0579, 0407  
 Basic Line . . . . . 0245, 0401, 0583, 0190  
 . . . . . 0695, 0244, 0309, 0482, 0036, 0064  
 . . . . . 0244, 0366, 0583, 1064  
 Bastide . . . . . 0244  
 Bauer . . . . . 0832  
 Baur . . . . . 0222, 0064, 0583, 0581, 0218  
 . . . . . 0388, 1532, 0376, 0482, 0539, 0562  
 . . . . . 0581  
 Bazin . . . . . 0244  
 Beijing . . . . . 0036, 0253, 0401, 0839  
 Beko . . . . . 0397, 0513, 0583, 0742, 0062  
 . . . . . 0741, 0633, 0064, 0445, 0835, 1064  
 Beon . . . . . 0064, 0583, 0445  
 Berthen . . . . . 0695  
 Best . . . . . 0364, 0397, 0448  
 Bestar . . . . . 0064, 0583, 0397, 0401  
 Bestar-Daewoo . . . . . 0401  
 Binatone . . . . . 0244  
 Black Diamond . . . . . 0641, 0847, 1064, 1936  
 Black Star . . . . . 0274  
 Blacktron . . . . . 0309  
 Blackway . . . . . 0309, 0245  
 Blaupunkt . . . . . 0581, 0218, 0482, 0197  
 . . . . . 0222, 0063, 0562  
 Blue Sky . . . . . 0064, 0741, 1064, 0514, 0695  
 . . . . . 0482, 0742, 0309, 0245, 0583  
 Blue Star . . . . . 0309  
 Bondstec . . . . . 0274  
 Bondstec . . . . . 0274  
 Boots . . . . . 0244, 0036  
 BPL . . . . . 0064, 0309  
 Brandt . . . . . 0652, 0528, 0426, 0314, 0223  
 . . . . . 0314, 0362, 0595, 0136, 0587  
 . . . . . 0264, 0741  
 Brandt Electronic . . . . . 0314, 0362, 0528  
 . . . . . 0595  
 Brinkmann . . . . . 0445, 0583, 0513, 0064  
 . . . . . 0695  
 Brionvega . . . . . 0064, 0583, 0114

Britannia	0243, 0244	CTC	0274
Bruns	0114, 0455	Curtis Mathes	0120, 0729
BSR	0321, 0190, 0579	Cybertron	0245
BTC	0245	Daewoo	0661, 0401, 0243, 0036, 0245 1164, 0244, 0064, 0135, 0197, 0583 0907, 1936
Bush	0245, 0695, 0376, 0036, 0063 0064, 0398, 0309, 0401, 0388, 0382 1064, 0514, 0244, 0583, 0741, 0262 0390, 0321, 0579, 0641, 0644, 1927	Dainichi	0243, 0245
Caihong	0036	Dansai	0064, 0583, 0062, 0036, 0063 0244, 0243
Canton	0245	Dantax	0397, 0513, 0741, 0742
Carad	0637, 0064, 0695, 1064	Dawa	0064, 0583, 0036
Carena	0482, 0583, 0064	Dayton	0036
Carrefour	0063, 0583	Daytron	0036, 0064, 0401
Carver	0197	Dayu	0401
Cascade	0036, 0064	De Graaf	0390, 0575
Casio	0064, 0583	Decca	0099, 0543, 1164, 0244, 0064
Cathay	0064, 0583	DeGraaf	0190
CCE	0064, 0583, 0244	Deitron	0064, 0583, 0401
Celestial	0847	Denver	0064, 0583, 0614
Centrum	1064	DER	0220
Centurion	0064, 0583	Desmet	0036, 0064, 0114, 0583
Century	0114, 0274, 0265	Diamant	0064, 0583
CGE	0101, 0274, 0103, 0190, 0303 0445, 0397, 0445, 0579	Diamond	0036, 0243, 0398, 0733, 0847
Changcheng	0036, 0401	Digatron	0064
Changfei	0036, 0401	Digiline	0064, 0583, 0132, 0695
Changhai	0036	Digitex	0847
Changhong	0036, 0535, 0847	Digitor	0064, 0583
Chengdu	0036	Digivision	0388
Ching Tai	0036	Digix	0907
Chun Yun	0036	Dik	0064, 0583
Chunfeng	0036	Dixi	0036, 0583, 0244, 0064, 0114
Chung Hsin	0063, 0135	DL	0614
Chunsun	0036	Domeos	0695
Cimline	0036, 0245	Dongda	0036
City	0036	Donghai	0036
Clarivox	0445, 0064, 0364	Dream Vision	1731
Clatronic	0245, 0397, 0583, 0398, 0741 0244, 0245, 0103, 0274, 0036, 0064	DTS	0036
Clayton	1064	Dual	0244, 0064, 0286, 0190, 0426 0379, 0579, 1164
CMS	0243, 0244	Dual-Tec	0244, 0286
CMS Hightec	0244	Dumont	0114, 0131, 0374
Commercial Solutions	1474	Dunai	0190
Concorde	0036	Durabrand	1464
Condor	0243, 0064, 0309, 0583, 0397 0036, 0445, 0190, 0274	Dux	0064, 0583
Conia	0847	D-vision	0064, 0583
Conrac	0835	Dwin	0120
Conrad	0064, 0583	Dynatron	0064, 0583
Conrowa	0036	ECE	0064
Contec	0243, 0036, 0063, 0064	Edison-Minerva	0514
Continental Edison	0528, 0314, 0223 0595, 0426, 0136, 0264, 0514	E-elite	0245
Cosmel	0036, 0064, 0364	Elbe	0462, 0265, 0397, 0190, 0064 0583, 0245, 0218, 0637, 0244, 0543 0388, 0286, 0319, 0657
Cosmel	0064	Elbe-Sharp	0543
Crosley	0114, 0274, 0101, 0103, 0374 0579	Elcit	0114, 0274
Crown	0036, 0397, 0064, 0448, 0583 0514, 0741, 0386, 0742, 0445, 0366 0103, 0513, 0633, 0739, 1064	Elekta	0036, 0583, 0309
Crystal	0458	Elfunk	1064
CS Electronics	0274, 0243, 0245	ELG	0064, 0583
		Elin	0243, 0583, 0131, 0575, 0388 0190, 0036, 0064, 0376, 0475
		Elite	0245, 0583
		Elta	0036, 0458

Emco	0274	GEC	0190, 0064, 0583, 0543, 0099
Emerson	0204, 0114, 0064, 0583		0244, 0376, 0388
	0398, 0309, 0388, 0513, 0397, 0190	Geloso	0274, 0401, 0036, 0374, 0390
	0274, 0695, 0741, 1936		0579
Emperor	0309	General	0136
Erres	0064, 0583	General Electric	0314
ESA	0839	General Technic	0036
ESC	0064, 0244	Genesis	0036, 0064
Ether	0036	Genexxa	0245, 0583, 0190, 0036
Etron	0064, 0583, 0036, 0847	Gericom	0835, 0907
Euro-Feel	0244	Giant	0036, 0244
Euromann	0064, 0243, 0244, 0448	Goldfunk	0695
	0243, 0244, 0397, 0448	Goldhand	0243
Europa	0064	Goldline	0364
Europhon	0064, 0543, 0583, 0274	Goldstar	0064, 0036, 0317, 0244, 0274
	0244, 0243, 0458, 0579		0243, 0583, 0458, 0190, 0388, 0136
Expert	0233, 0286		0482, 0390, 0633, 0741, 0742
Exquisit	0064, 0583, 0274	Gooding	0514
Feilang	0036	Goodmans	0063, 0661, 0064, 0583
Feilu	0036		0036, 1064, 0695, 0543, 0514, 0317
Feiyue	0036		0507, 0398, 0587, 0244, 0362, 0245
Fenner	0401, 0036, 0401		1936, 0062, 0099, 0262, 0398, 0401
Ferguson	0652, 0265, 0220, 0136, 0587		0587, 0614, 0657, 0661, 0741, 0835
	0064, 0583, 0131, 0135, 0388, 0064		0907, 1927
	0222, 0314, 0362, 0575, 1064	Gorenje	0397, 0448
Fidelity	0220, 0190, 0398, 0064, 0583	GPM	0245
	0243, 0388, 0390, 0539	Gradiente	0197
Filsai	0244	Graetz	0388, 0398, 0366, 0583, 0190
Finlandia	0373, 0386, 0190, 0099, 0314		0374, 0514, 0741
	0390	Granada	0064, 0583, 0099, 0386, 0135
Finlux	0132, 0131, 0741, 0373, 0244		0244, 0063, 0366, 0543, 0103, 0500
	0099, 0190, 0543, 0742, 0658, 0103		0362, 0587, 0190, 0575, 0378, 0383
	0519, 0507, 0500, 0445, 0114, 0064		0390, 0427
	0244, 0374, 0579, 0835	Grandin	0309, 0064, 0427, 0036, 0190
First Line	0321, 0064, 0243, 0401		0637, 0741, 0742, 0695, 0482, 0401
	0695, 0741, 0190, 0036, 0243, 0274		0309, 0245, 0695, 0907, 1064
	0265, 0099, 0244, 0388, 0099, 0244	Grundig	0562, 0264, 0218, 0614, 0581
	0262, 0376, 0579, 0583, 0835, 1064		0583, 0064, 0103, 0036, 0063, 0222
Firststar	0036		0514, 0657, 0710, 0733
Fisher	0131, 0244, 0397, 0388, 0190	H&B	0835
	0099, 0114, 0063, 0579, 0582	Haaz	0733
Flint	0064, 0583, 0099, 0245, 0482, 0637	Haier	0064, 0535, 0614
Forgestone	0220	Haihong	0036
Formenti	0114, 0190, 0243, 0583, 0513	Halifax	0243, 0244
	0103, 0064, 0114, 0243, 0374, 0579	Hampton	0243, 0244
Formenti-Phoenix	0243, 0579	Hanimex	0245, 0321
Fortress	0120, 0114	Hanseatic	0064, 0583, 0309, 0388, 0661
Fraba	0397, 0583, 0064		0321, 0455, 0397, 0036, 0321, 0244
Friac	0036, 0064, 0397, 0448, 0637		0303, 0458, 0835
Frontech	0274, 0458, 0190, 0036, 0244	Hantarex	0036, 0064, 0543, 0265
	0390, 0475	Hantor	0064, 0583
Fujitsu	0233, 0099, 0036, 0710, 0064	Harwood	0036, 0064, 0514
	0583, 0388, 0286, 0244, 0286, 0379	Hauppauge	0064, 0583
Fujitsu General	0036, 0233, 0244, 0710	Havermy	0120
Funai	0695, 0321	HCM	0036, 0064, 0583, 0244, 0245
Future	0064, 0583		0445, 0309
Galaxi	0064, 0583	Hema	0244, 0036
Galaxis	0397, 0445, 0064	Hifivox	0528, 0136, 0595, 0223, 0426
GBC	0190, 0245, 0036, 0401, 0579	Higashi	0243
GE	0309, 0136, 0362, 0120, 0587	Hikona	0245
	0652, 1474	HiLine	0064
Geant Casino	0190		

Hinari . . . . .	0064, 0036, 0245, 0190, 0514	IR . . . . .	0064
Hisawa . . . . .	0063, 0262, 0321, 0382	Irradio . . . . .	0036, 0064, 0274, 0398, 0317
Hisense . . . . .	0309, 0245, 0637, 0427, 0482		0103, 0245
Hit . . . . .	0741	Isukai . . . . .	0245, 0064, 0482, 0309
Hitachi . . . . .	0036, 0535, 0583	ITC . . . . .	0244, 0579
Hitachi . . . . .	0114	ITS . . . . .	0064, 0398, 0243, 0036, 0583
Hitachi . . . . .	0252, 0244, 0376, 0383, 0500	ITT . . . . .	0190, 0507, 0376, 0575, 0220
Hitachi . . . . .	0543, 0583, 0244, 0063, 0064, 0099		0373, 0366, 0388, 0637, 0374
Hitachi . . . . .	0132, 0190, 0223, 0036, 0135, 0374		0378, 0500
Hitachi . . . . .	0390, 0500, 0507, 0519, 0535, 0575	ITT Nokia . . . . .	0388, 0575, 0507, 0373
Hitachi . . . . .	0579, 0661, 1064, 1072, 1164, 1252		0366, 0637, 0658, 0190, 0374, 0376
Hitachi Fujian . . . . .	1603		0378, 0458, 0500, 0633
Hitsu . . . . .	0036, 0482, 0245, 0637	ITV . . . . .	0064, 0401
HMV . . . . .	0114, 0220	Jean . . . . .	0063, 0036
Hoehner . . . . .	0741	JEC . . . . .	0062
Home Electronics . . . . .	0633	JiaLiCai . . . . .	0036
Hongmei . . . . .	0036, 0120	Jinfeng . . . . .	0253
Hornyphon . . . . .	0064, 0583	Jinque . . . . .	0036
Hoshai . . . . .	0245, 0309	Jinta . . . . .	0036
Hua Tun . . . . .	0036	Jinxiang . . . . .	0036, 0064, 0583
Huafa . . . . .	0036	JMB . . . . .	0064, 0583, 0661
Huanghaimei . . . . .	0036	Jocel . . . . .	0739
Huanghe . . . . .	0036	Jubilee . . . . .	0583
Huanglong . . . . .	0036	JVC . . . . .	0680, 0220, 0398, 0245, 0445
Huangshan . . . . .	0036		0063, 0120, 0535, 0633, 0677, 0710
Huanyu . . . . .	0401, 0243	Kaige . . . . .	0036
Hygashi . . . . .	0244, 0243	Kaisui . . . . .	0036, 0245, 0064, 0583, 0243
Hyper . . . . .	0036, 0243, 0244, 0274		0482, 0244, 0309
Hypersonic . . . . .	0388	Kambrook . . . . .	0244, 0458
Hypson . . . . .	0064, 0583, 0742, 0244, 0309	Kamp . . . . .	0243
	0265, 0482, 0427, 0513, 0695, 0741	Kangli . . . . .	0036, 0401
	1064	Kangyi . . . . .	0036
Iberia . . . . .	0064, 0583	Kapsch . . . . .	0233, 0190, 0286, 0131, 0388
ICE . . . . .	0398, 0064, 0036, 0245, 0244, 0243	Karcher . . . . .	0064, 0583, 0309, 0637, 0190
Ices . . . . .	0245, 0243		0448, 0633, 0741
ICT . . . . .	0064, 1164	Kathrein . . . . .	0583, 0064
Imperial . . . . .	0064, 0190, 0583, 0445, 0388	Kawa . . . . .	0398
	0101, 0103, 0376, 0223, 0274, 0397	Kawasho . . . . .	0243
	0458, 0579, 0657	KB Aristocrat . . . . .	0190, 0374
Imperial Crown . . . . .	0036, 0401	Kendo . . . . .	0637, 0274, 0583, 0190, 0539
Indesit . . . . .	0264		0397, 0455, 0064, 0262, 0321, 1464
Indiana . . . . .	0064, 0583	Kennedy . . . . .	0233, 0190, 0462, 0579
Ingelen . . . . .	0514, 0637, 0388, 0190, 0741	Kennex . . . . .	1064
Ingersol . . . . .	0036	KIC . . . . .	0244
Inno Hit . . . . .	0036, 0099, 0245, 0244, 0543	Kingsley . . . . .	0243
	0274, 0317, 0309	Kiota . . . . .	0398, 0482
Innova . . . . .	0064	Kioto . . . . .	0583, 0733
Innovation . . . . .	0064, 0583	Kiton . . . . .	0583, 0064, 0695
inotech . . . . .	0847	KLL . . . . .	0064
Interactive . . . . .	0064, 0583, 0190, 0388	Kneissel . . . . .	0462, 0064, 0401, 0583, 0286
	0397, 0136		0319, 0265, 0637
Interbuy . . . . .	0036, 0064, 0539, 0583, 0274	Kolin . . . . .	0063, 0135
Interfunk . . . . .	0064, 0583, 0114, 0190, 0388	Kolster . . . . .	0064, 0583, 0274, 0376
	0397, 0136, 0274, 0528, 0595, 0376	Kongque . . . . .	0036
	0539	Konichi . . . . .	0036
Internal . . . . .	0064, 0583, 1936	Konka . . . . .	0064, 0583, 0245, 0445, 0245
International . . . . .	0243		0309, 0398, 0614, 0741
Intervision . . . . .	0309, 0244, 0398, 0513	Kontakt . . . . .	0514
	0397, 0514, 0245, 0190, 0274	Korpel . . . . .	0064, 0583
	0036, 0583, 0458, 0064, 0309	Kosmos . . . . .	0064, 0583
	0475, 0482	Koyoda . . . . .	0036
		Kraking . . . . .	0265

KTV	0244	Matsui	0262, 0204, 0064, 0382, 0583
Kuaile	0036		0038, 0398, 0244, 0099, 0321, 0063
Kuba	0190, 0376		0482, 0190, 0543, 0222, 0218, 0362
Kulun	0036		0062, 0036, 0262, 0390, 0458, 0514
Kunlun	0253, 0401		0741, 1064
Kyoshu	0445	Matsushita	0677
Kyoto	0190, 0243, 0244	Matsuyama	0614
L&S Electronic	0741, 0835	MCE	0036
LaSat	0513, 0397	Mediator	0064, 0583
Leader	0036	Medion	0064, 0695, 1164, 0539, 0583
Lecson	0064, 0583		0741, 0835, 0907, 1064, 1464, 1927
Legend	0036, 0364	Megas	0637
Lenco	0064, 0190, 0131, 0401, 0614	MEI	1064
	1064	Meletronic	0036, 0064, 0131, 0132
Lenoir	0036		0190, 0222, 0243, 0244, 0274, 0373
Lesa	0274		0376, 0401, 0507, 0519, 0539, 0661
Levis Austria	0064, 0583		0741
Leyco	0099, 0321, 0064	Melvox	0427
LG	0244, 0274, 0397, 0458, 0036	Memorex	0036, 1064
	0064, 0190, 0243, 0135, 0583, 0671	Memphis	0364, 0099
	0741, 0742, 0883, 1664	Mercury	0036, 0064
Liesenk & Tter	0064, 0583	Mermaid	0064
Liesenkotter	0064	Metronic	0652
Lifetec	0036, 0064, 0695, 0539, 1064	Metz	0114, 0222, 0562, 0394, 0064
	1164, 0583, 0245, 0401, 0741		0583, 0695, 0581, 0415, 0474, 0614
Lloyds	0036		0695, 0773
LME	0458	MGA	0064, 0131, 0245
Local India TV	0036, 0398		0401
Lodos	1064	Micromaxx	0064, 0583, 0835, 0657
Loewe	0539, 0064, 0397, 0114, 0319		0695, 1064
	0543	Microstar	0835
Logik	0038	MicroTEK	0847
Logik	0036, 0038, 0220, 0398, 0907	Minato	0064, 0583
Logix	0695	Minerva	0514, 0222, 0543, 0103, 0135
Luma	0233, 0064, 0401, 0036, 0286		0581, 0264, 0562
	0390, 1064	Minoka	0064
Lumatron	0233, 0064, 0286, 0388, 0244	Minoka	0386
Lux May	0064, 0036	Mirror	1927
Luxor	0264, 0384, 0519, 0388, 0383	Mistral Electronics	0220
	0575, 0190, 0373, 0500, 0244, 0658	Mitsubishi	0135, 0120, 0539, 0114
	0317, 0376, 0390, 0507, 1064		0220, 0063, 0583, 0264, 0064, 0562
M Electronic	0373, 0064, 0274, 0132		1064
	0131, 0401, 0036, 0244, 0507, 0519	Mitsuri General	0190
	0243, 0190, 0314, 0583, 0661, 0388	Mivar	0397, 0317, 0243, 0103, 0636
	0218, 0222, 0136		0543, 0244, 0318, 0319
Madison	0064	Monaco	0036
Magnadyne	0114, 0274, 0374, 0543, 0579	Morgan's	0064, 0583
Magnafon	0543, 0243, 0103	Motion	0103
Magnavox	0063, 0733	Motorola	0120
Magnum	0064, 0741, 0742	MTC	0397, 0539, 0243, 0388, 0376
Manesth	0064, 0583, 0190, 0303, 0062	MTlogic	0741
Manesth	0062, 0064, 0244, 0262, 0321	Mudan	0036, 0253
Manhattan	0064, 0695, 1064	Multibroadcast	0220
Marantz	0064, 0583	Multitec	0064, 0513, 0695, 1064, 0583
Marelli	0114	Multitech	0244, 0036, 0243, 0397
Mark	0064, 0583, 0401, 0036, 0741		0274, 0583, 0064, 0103, 0390, 0513
	0742, 0244	Murphy	0131, 0243, 0190
Master's	0064	Musikland	0064, 0245, 0274
Masuda	0036, 0064, 0244, 0245, 0398	Myryad	0583, 0064
		NAD	0388
		Naiko	0064, 0583, 0633
		Nakimura	0401, 0064

Nanbao	0036	Palladium	0397, 0064, 0445, 0583, 0274
Naonis	0190, 0390		0190, 0581, 0244, 0376, 0114, 0390
NAT	0253		0397, 0657, 0741, 1164
National	0264, 0253, 0535	Palsonic	0064, 0244, 0245, 0445, 0475
NEC	0063, 0197, 0036, 0401, 0244	Panama	0036, 0244, 0064, 0583, 0274
	0064, 0583, 0038, 0482, 0535, 0614	Panasonic	0677, 0264, 0253, 0543, 0575
	1731		0388, 0190, 0394, 0064, 0374, 0135
Neckermann	0064, 0218, 0583, 0190		0378, 0535, 0677, 1337, 1677
	0445, 0274, 0581, 0244, 0583, 0539	Panavision	0064
	0376, 0114, 0390, 0390, 0397	Panda	0036, 0253, 0535, 0733
NEI	0064, 0583, 0458, 0364, 0398	Pathe Cinema	0265, 0319, 0190, 0243
Nesco	0274		0427, 0458, 0579
Netsat	0064, 0583	Pathe Marconi	0528, 0426, 0264, 0595
Network	0364		0223
Neufunk	0064, 0036, 0245, 0309, 0583	Pausa	0036
	0637, 0741	Perdio	0099, 0064, 0190, 0243, 0309
New Tech	0244, 0475	Perfekt	0064
New World	0245	Philco	0114, 0101, 0445, 0103, 0274
Newave	0036, 0120		0397, 0064, 0579
Newtech	0064, 0036	Philex	0220, 0378
Nicamagic	0243	Philharmonic	0244
Nikkai	0099, 0244, 0062, 0364, 0243,	Philips	0583, 0064, 0883, 0581, 0218
	0036, 0063, 0064, 0245		0114, 0220, 0036, 0135, 0265, 0388
Nobliko	0103, 0243		0401, 0539
Nogamatic	0426, 0528, 0223, 0595	Phoenix	0064, 0114, 0243, 0513, 0579
Nokia	0190, 0388, 0376, 0519, 0500	Phonola	0064, 0243, 0114, 0220
	0366, 0401, 0658, 0373, 0386, 0637	Pilot	0733, 0739
	0136, 0384, 0374, 0378, 0507, 0575	Pioneer	0064, 0455, 0136, 0038, 0190
	0633		0197, 0314, 0388, 0513, 0539
Nordic	0244	Pionier	0513
Nordmende	0136, 0314, 0595, 0426	Plantron	0064, 0036
	0223, 0064, 0222, 0528, 0587, 0741	Playsonic	0064, 0244, 0366, 0741, 0742
Normerel	0064	Policom	0595, 0528
Novatron	0064, 0132, 0401	Polytron	0309
Nu-Tec	0482, 0847	Poppy	0036
Oceanic	0190, 0388, 0374, 0427, 0500	Portland	0401
	0575	Powerpoint	0064, 0514
Okano	0397, 0036, 0064	Prandoni-Prince	0274, 0543, 0103
Onimax	0741		0388, 0390
Onwa	0398, 0245	Precision	0244
Opera	0064	Prima	0036
Optimus	0677	Prinston	1064
Optonica	0120	Prinz	0099, 0388
Orbit	0064	Profex	0036, 0388, 0103, 0190, 0390
Orion	0262, 0204, 0064, 0543, 0382	Profi	0036
	0038, 0036, 0321, 0583, 0741, 0907	Profitronic	0064
	1943	Profi-Tronic	0064
Online	0064, 0245	Proline	0099, 0064, 0652, 0657, 0661
Ormond	0695, 1064		1064
Orsowe	0543	Proscan	1474
Osaki	0099, 0245, 0064, 0401, 0583	Prosonic	0064, 0243, 0244, 0695, 0741
	0303, 0064, 0244, 0382	Protech	0064, 0036, 0445, 0695, 0376
Osio	0317		0458, 0364, 0244, 0274, 0513, 0579
Oso	0245		1064
Osume	0063, 0064, 0583, 0099, 0245	Proton	0036, 0671
Otto Versand	1532, 0120, 0539, 0064	ProVision	0064, 0583, 0741
	0583, 0222, 0218, 0388, 0136, 0253	Pye	0064, 0583, 0114, 0376, 0401, 0581
	0274, 0562, 0244, 0036, 0376, 0309	Pymi	0036
	0581, 0455, 0543, 0262, 0321, 0063	Qingdao	0253
	0374, 0579	Quadral	0245
Pacific	0583, 0741, 1064, 1164	Quasar	0274, 0036, 0677
Pael	0243		



Quelle . . . . .	0064, 0131, 0388, 0539, 0528 0562, 0581, 0063, 0244, 0274, 0101 0038, 0579, 0695, 1064	Schaub Lorenz . . . . .	0376, 0575, 0513, 0374 0388, 0401, 0633, 0741
Questa . . . . .	0063	Schneider . . . . .	0064, 1164, 0244, 0286 0274, 0398, 0388, 0245, 0695, 1064 0190, 0741, 0064, 0376, 0379, 0583
Radialva . . . . .	0136, 0245, 0364, 0458	Scotland . . . . .	0190
Radiola . . . . .	0064, 0583, 0244	Seaway . . . . .	0661
Radiomarelli . . . . .	0114, 0543, 0064	Seelver . . . . .	1064
RadioShack . . . . .	0064	SEG . . . . .	0244, 0695, 0063, 0064, 0036, 0103, 0243, 0244, 0245, 0376, 0514 0579, 0661, 1064, 1464
Radiotone . . . . .	0036, 0064, 0455, 0695, 1064	SEI . . . . .	0114, 0321, 0233, 0064, 0204, 0374 0543, 0579
Rank Arena . . . . .	0063	Sei-Sinudyne . . . . .	0064, 0114, 0233, 0321 0374, 0543, 0579
RCA . . . . .	1474, 0120, 0587, 0652	Seleco . . . . .	0233, 0190, 0286, 0373, 0374 0390, 0398, 0462
Recor . . . . .	0445	Sencora . . . . .	0036
Rediffusion . . . . .	0388, 0063, 0373, 0378 0575	Sentra . . . . .	0303, 0062
Reflex . . . . .	0064, 0695, 1064	Serino . . . . .	0120, 0482, 0637
Reoc . . . . .	0741	Shanghai . . . . .	0036, 0253
Revox . . . . .	0064, 0397	Sharp . . . . .	0120, 0036, 0063, 0220, 0321 0543, 0677, 1220
Rex . . . . .	0233, 0190, 0286, 0390	Shen Ying . . . . .	0036
RFT . . . . .	0114, 0455, 0064, 0099	Shencai . . . . .	0036
Rhapsody . . . . .	0243	Sheng Chia . . . . .	0036, 0120
R-Line . . . . .	0064	Shenyang . . . . .	0036
Roadstar . . . . .	0036, 0064, 0245, 0309 0445, 0695, 0741, 1064, 1927	Sherwood . . . . .	0036
Robotron . . . . .	0114	Shintoshii . . . . .	0064
Rover . . . . .	0063	Shivaki . . . . .	0064
Rowa . . . . .	0036, 0064, 0243, 0614, 0739	Shorai . . . . .	0321
Roxy . . . . .	0475	Show . . . . .	0036, 0099, 0445
Royal Lux . . . . .	0448, 0362	Siarem . . . . .	0114, 0543, 0374, 0579
RTF . . . . .	0114	Siemens . . . . .	0218, 0222, 0581, 0064, 0374 0562
Saba . . . . .	0652, 0314, 0114, 0136, 0426 0543, 0388, 0362, 0575, 0587, 0528 0525, 0223, 0190, 0374, 0595, 0652 0741	Siera . . . . .	0583, 0064
Saccs . . . . .	0265	Siesta . . . . .	0397
Sagem . . . . .	0482, 0637	Silva . . . . .	0243, 0064, 0388
Saige . . . . .	0036	Silva Schneider . . . . .	0064
Saisho . . . . .	0262, 0543, 0204, 0244, 0190 0036, 0038, 0458	Silver . . . . .	0063, 0388, 0482, 0742
Saivod . . . . .	0064, 0583, 0695, 0739, 1064	SilverCrest . . . . .	1064
Sakai . . . . .	0190	Singer . . . . .	0114, 0036, 0362, 0398, 0462 1564
Sakyno . . . . .	0482	Sinudyne . . . . .	0204, 0543, 0321, 0388 0114, 0233, 0262, 0374, 0579
Salora . . . . .	0317, 0383, 0388, 0386, 0543 0575, 0366, 0190, 0376, 0390, 0507 0579, 0658	Skantic . . . . .	0384, 0383
Salsa . . . . .	0362	SKY . . . . .	0064, 0309, 0907
Sambers . . . . .	0543, 0103	Skyworth . . . . .	0036, 0064, 0832
Sampo . . . . .	0036, 0063, 0120, 0677	Sliding . . . . .	0907
Samsung . . . . .	0064, 0036, 0244, 0397, 0243 0671, 0099, 0317, 0190, 0729, 0839 0841, 0064, 0120, 0253, 0475, 0583 0614	SLX . . . . .	0695
Sandra . . . . .	0243, 0244	Smaragd . . . . .	0514
Sansui . . . . .	0064, 0583, 0482, 0398, 0733 0741, 1564	Solavox . . . . .	0388, 0099, 0064, 0190, 0378 0575
Santon . . . . .	0036	Sonawa . . . . .	0245
Sanyo . . . . .	0319, 0038, 0397, 0366, 0131 0099, 0243, 0244, 0190, 0036, 0135 0064, 0583, 0513, 0063, 0197, 0535 0582	Songba . . . . .	0036
Sanyuan . . . . .	0036, 0120	Soniko . . . . .	0064
SBR . . . . .	0064, 0583, 0220	Sonitron . . . . .	0397, 0244, 0366
		Sonoko . . . . .	0064, 0036, 0244, 0309
		Sonolor . . . . .	0190, 0309, 0374, 0388, 0575
		Sontec . . . . .	0064, 0397, 0036, 0321
		Sony . . . . .	1678, 0063, 0101, 0038, 0064 0120, 0197, 0677, 1037, 1532

Sound & Vision	0245, 0401	Tek.	0847
Soundwave	0064, 0445, 0742	Teleavia	0136, 0528, 0517, 0595, 0223
Sowa	0063, 0253		0426
Spectra	0036	Telecor	0064, 0190, 0286
Ssangyong	0036	Telefunken	0136, 0528, 0498, 0362
Staksonic	0036		0652, 0729, 0426, 0064, 0583, 0101
Standard	0245, 0036, 0064, 0244, 0401		0593, 0595, 0136, 0223, 0314, 0373
	1064		0513, 0517, 0525, 0587, 0614, 0739
Star Lite	0064		0741, 0847
Starlite	0036, 0064, 0579	Telefusion	0064
Stenway	0309, 0245	Telegazi	0064, 0190
Stern	0233, 0286, 0190, 0390	Telesonic	0064
Strato	0036, 0064	Telestar	0036, 0064, 0583
Sunkai	0321, 0382, 0245, 0262	Teletech	0036, 0274, 0064, 0364, 0695
Sunkai	0321, 0382, 0482, 0514, 0637		1064
Sunstar	0036, 0064, 0398	Teleton	0244, 0063, 0233, 0286, 0376
Sunwatt	0482		0390
Sunwood	0064, 0036	Televideon	0243, 0579
Superla	0543, 0243	Televue	0064
Superscan	0120	Temco	0321
Supersonic	0036, 0482, 0832	Tempest	0036, 0482
Supertech	0036, 0064, 0243, 0245	Tennessee	0064
Supra	0401, 0036	Tensai	0131, 0245, 0321, 0036, 0132
Susumu	0245, 0314, 0362		0401, 0398, 0064, 0244, 0274, 0742
Sutron	0036		1064
SVA	0614	Tenson	0036
Svasa	0482	Tevion	0583, 0695, 0741, 0835, 1064
Swissline	0274		1164
Sydney	0243, 0244	Texet	0244, 0036, 0243, 0245, 0401
Synco	0063, 0120	Thompson	0652
Sysline	0064	Thomson	0264, 0314, 0136, 1474, 0362
Sytong	0243		0426, 0517, 0528, 0498, 0595, 0223
T + A	0474		0064, 0264, 0376, 0587, 0652
Tacico	0036	Thorn	0220, 0064, 0539, 0388, 0101
Tai Yi	0036		0265, 0062, 0063, 0099, 0131, 0136
Taishan	0036, 0401		0220, 0362, 0386, 0562, 0580
Tandberg	0394, 0136	Thorn-Ferguson	0220, 0265
Tandy	0245, 0120, 0244, 0274, 0303	Tiane	0120
	0099, 0190	TMK	0204
Targa	0729	Tobishi	0245
Tashiko	0063, 0190, 0243, 0244, 0386	Tobo	0036
	0390, 0677	Tokai	0099, 0064, 0036, 0190, 0364
Tatung	0064, 0099, 0038, 0036, 0063		0401, 0475, 0695, 1064
	0244, 0543, 0580	Tokaido	1064
TCL	0733, 1564	Tokyo	0243, 0062, 0475
TCM	0741, 0835	Tomashi	0309, 0245
Teac	0036, 0064, 0445, 0482, 0695	Tongtel	0614
	1064, 0197, 0244, 0309, 0445, 0458	Topline	0695
	0539, 0733, 0739, 0741, 1464, 1695	Toshiba	0270, 0535, 0677, 0063, 0062
	1936		0036, 0120, 0136, 0222, 0244, 0270
TEC	0244, 0274, 0498, 0362, 0036		0517, 0580, 0671, 0741, 1535, 1731
	0064, 0286, 0364, 0579	Towada	0376, 0244, 0579
Tech Line	0064, 0695, 1464	Toyoda	0036, 0398, 0303
Techica	0245	Trakton	0244
Technics	0583, 0677	Trans Continens	0244, 0695, 0064, 1064
TechniSat	0583	Transonic	0064, 0583, 0539, 0739, 0036
Technisson	0741		0445, 0482, 0614
Technosonic	0583	Transtec	0243
Tecnimagen	0583	Triad	0064, 0583, 0245
Teco	0036, 0063, 0120, 0245, 0680	Trident	0543, 0244
Tedalex	0036, 0244, 0303, 0445, 0458	Tristar	0245, 0220
	0633, 1564		

Triumph . . . . .	0204, 0543, 0593, 0064, 0270 0373, 0583	Worldview . . . . .	0482
Tsoschi . . . . .	0309	Xenius . . . . .	0661
Tuntex . . . . .	0036	Xiahua . . . . .	0036
TVTEXT 95 . . . . .	0583	Xianghai . . . . .	0036
Uher . . . . .	0103, 0064, 0401, 0445, 0513 0397, 0286, 0233, 0507	Xiangyu . . . . .	0036
Ultravox . . . . .	0114, 0401, 0243, 0190, 0064 0583, 0274, 0378, 0579	Xingfu . . . . .	0036
Unic Line . . . . .	0064, 0583, 0482	Xrypton . . . . .	0064, 0583
United . . . . .	0064, 0583, 0741, 0742, 1064 1943	Yamaha . . . . .	0677, 1603
Universal . . . . .	0064	Yamashi . . . . .	0309, 0482, 0244, 0583
Universum . . . . .	0373, 0132, 0562, 0388 0274, 0519, 0507, 0397, 0445, 0038 0539, 0063, 0190, 0321, 0131, 0064 0583, 1532, 0695, 0244, 0136, 0658 0036, 0101, 0103, 0197, 0204, 0317 0373	Yamishi . . . . .	0244, 0309, 0482
Univox . . . . .	0364, 0064, 0190, 0265, 0114 0364	Yingge . . . . .	0036
Utax . . . . .	0190	Yokan . . . . .	0064, 0583
V7Videoseven . . . . .	0907	Yoko . . . . .	0244, 0064, 0036, 0397, 0366 0243, 0274, 0458, 0036, 0245, 0448
Vestel . . . . .	0064, 0190, 0695, 1064, 0244 0579, 0583	Yonggu . . . . .	0036
Vexa . . . . .	0036, 0583	Yorx . . . . .	0245
Victor . . . . .	0063, 0677, 0680	Yousida . . . . .	0036
Videocon . . . . .	0535	Yuhang . . . . .	0036
Videologic . . . . .	0243, 0245	Zanela . . . . .	0265
Videologique . . . . .	0243, 0245	Zanussi . . . . .	0233, 0244, 0390
Videomac . . . . .	0036	Zenith . . . . .	1936
Videosat . . . . .	0274	Zenor . . . . .	0366
VideoSystem . . . . .	0064, 0583	ZhuHai . . . . .	0036, 0401
Videotechnic . . . . .	0243, 0244		
Videoton . . . . .	0383, 0190		
Vidtech . . . . .	0063		
Visiola . . . . .	0243		
Vision . . . . .	0064, 0583, 0244		
Vistar . . . . .	0303, 0388, 0233		
Vortec . . . . .	0064, 0583		
Voxson . . . . .	0114, 0064, 0445, 0190, 0390		
Waltham . . . . .	0244, 0695, 0445, 0314, 0064 0583, 0136, 0136, 0190, 0383, 0458 0517, 1064		
Warumaia . . . . .	0401		
Watson . . . . .	0064, 0583, 0245, 0036, 0695 1064, 1464		
Watt Radio . . . . .	0243, 0190, 0579		
Wega . . . . .	0064, 0063, 0114		
Wegavox . . . . .	0036, 0064		
Weipai . . . . .	0036		
Welltech . . . . .	0741		
Weltblick . . . . .	0064, 0583, 0244		
Weston . . . . .	0064, 0583		
Wharfedale . . . . .	0064, 0583		
White Westinghouse . . . . .	0243, 0364, 0064 1936		
Windsor . . . . .	1064		
Windstar . . . . .	0309, 0364		
Windy Sam . . . . .	0583		
Wintel . . . . .	0741		
World-of-Vision . . . . .	0907		

## SETUP CODES FOR DVD

3DLAB	0566	Changhong	0654
Acoustic Solutions	0740, 0757, 1255	Cinea	0858
AEG	0797, 0815, 0817	Cineral	0757
AFK	1078	Cinetec	0740
Aim	0699, 0726, 0860	CineUltra	0726
Airis	0699, 1251	CineVision	0860, 0896
Aiwa	0560, 0668, 1270	Classic	0757, 1757
Akai	0717, 0722, 0732, 0743, 0793	Clatronic	0699, 0815, 0845
	0797, 0806, 0815, 0817, 1110, 1142	Clayton	0740
	1722	Coby	0757, 0879
Akira	0726	Conia	0699, 0879
Akura	1078	Continental Edison	0858
Alba	0566, 0699, 0722, 0726, 0740	Craig	0858
	0744, 0757, 0810, 1078, 1722	CrossWood	1180
Alco	0817	Crown	0797, 0678, 0717, 0740, 1142
Alize	1178	Crypto	1255
Allegro	0896	Cybercom	0858
Altacom	1251	CyberHome	0741, 0843
Amitech	0797	Cytron	0678, 0732, 0743
Amoi	0879	Daewoo	0732, 0741, 0797, 0860
Amstrad	0740, 1178		0896, 1933
Ansonic	0858	Dalton	1063
Apex Digital	0699, 0744, 1031, 1127	Dansai	0797, 0810, 1142, 1722
Aria	0920	Dantax	0566, 0740, 0750, 0817
Arianet	0845, 0920	DCE	0858
Aristona	0673	DEC	0845
Asono	1251	Decca	0797, 1142
Atacom	1251	Denon	0517, 0661, 1661
ATD	0745	Denver	0726, 0815, 1110, 1131
A-Trend	0741	Denzel	0692
Audiosonic	0717	Desay	1117
Audiovox	0744, 0817	Diamond	0678, 0795, 0817
Audioworld	0817	Dick Smith Electronics	0860, 1757
Auvio	1117	Digihome	0740
Awa	0757	digiRED	0744
Axon	0757	Digital i	0920
Basic Line	0740, 2021	Digitor	0678, 0717, 0860
BBK	1111, 1251	Digitrex	0699, 1031, 1127
Beko	1180	DiK	0858
Bellagio	1031	Dinamic	0815
Black Diamond	0740, 0793, 0860	DiViDo	0732
Blaupunkt	0744	DK Digital	0858, 1281
Blue Parade	0598	DMTech	0810, 1124
Blue Sky	0726, 0722, 0678, 0699, 0740	Dragon	0858
	0817	DreamX	1178
Boghe	1031, 1248	DSE	0860, 1757
Boman	0810	Dual	0678, 0692, 0740, 0757, 0806
Brainwave	0797, 1142		0810, 0817, 0858
Brandt	0678, 0530, 0578	Durabrand	0740, 0858
Broksonic	0722	D-Vision	1142
Bush	0726, 0717, 0740, 0699, 0716	DVX	0795
	0744, 0750, 0757, 0858, 0860, 0906	EagleTec	0741
California Audio Labs	0517	ECC	0757
Cambridge Audio	1111	Eclipse	0750
Cambridge Soundworks	0717, 0723	Elfunk	0740
Cat	0726	Elin	0797
CCE	0757	Elta	0699, 0717, 0797, 0815, 1142, 1178
Centrex	0699, 1031	Eltax	0793
Centrum	0740, 0806, 2021	Emerson	0618, 0732
CGV	1142	Enterprise	0618
		Enzer	0793, 1255
		EuroLine	0815, 1110, 1142

Fenner . . . . .	0678	Kenwood . . . . .	0561, 0517
Ferguson . . . . .	0678, 0722, 1722, 1757	Kiir . . . . .	0797
Finlux . . . . .	0618, 0699, 0768, 0797, 0810	Kingavon . . . . .	0845
Firstline . . . . .	1174	Kiss . . . . .	0692
Fisher . . . . .	0740, 0896	KLH . . . . .	0744, 0817
Funai . . . . .	0697	KLH Digital . . . . .	0744
GE . . . . .	0722	Koss . . . . .	0678
General Electric . . . . .	0549, 0744	Lawson . . . . .	0732, 0743, 0795
Giec . . . . .	0744	Lecson . . . . .	0723, 1560
Global Solutions . . . . .	1248	Lenco . . . . .	0726, 0678
Global Sphere . . . . .	0795	Lenco . . . . .	0678, 0726, 0740, 0797
Go Video . . . . .	0795	Lenox . . . . .	0717
GoldStar . . . . .	0768, 0810, 0860, 0896, 1757	Lexia . . . . .	0726, 0795
Goodmans . . . . .	0618, 0768	LG . . . . .	0618, 0768, 0817, 0896, 1933
Goodmans . . . . .	0678, 0717, 0740, 0750	Lifetec . . . . .	0678, 0858
Goodmans . . . . .	0757, 0810, 0817, 0860, 0906, 1031	Limit . . . . .	0743, 0795, 1131
Goodmans . . . . .	1248, 1281, 1757	Lodos . . . . .	0740
GPX . . . . .	0726	Loewe . . . . .	0566, 0768
Gradiente . . . . .	0517, 0678	LogicLab . . . . .	0795
Graetz . . . . .	0692	Logix . . . . .	0732, 0810, 1128
Gran Prix . . . . .	0858	Lumatron . . . . .	0722, 0732, 0768, 0860
Grandin . . . . .	0740, 0743, 1281	Lumatron . . . . .	1124, 1142
Greenhill . . . . .	0744	Lunatron . . . . .	0768
Grundig . . . . .	0566, 0578, 0678, 0697, 0713	Luxman . . . . .	0600
Grundig . . . . .	0722, 0732, 0740, 0802, 0817, 1031	Luxor . . . . .	0740, 1031, 1722, 1757
Grundig . . . . .	1063, 1722, 1757	Magnasonic . . . . .	0678
Grunke . . . . .	0797, 0817	Magnavox . . . . .	0530, 0566, 0673, 0740
H&B . . . . .	0740, 0845	Magnavox . . . . .	1941
Haier . . . . .	1117	Magnex . . . . .	0750
Hanseatic . . . . .	0768, 0810, 0817, 1180	Manhattan . . . . .	0732, 0740
HCM . . . . .	0815	Marantz . . . . .	0566
HDT . . . . .	0732	Mark . . . . .	0740
Henss . . . . .	0740	Marquant . . . . .	0797
Hisense . . . . .	0745	Mastec . . . . .	1248
Hitachi . . . . .	0600, 0691, 0722, 0740, 2021	Matsui . . . . .	0678, 0699, 0722, 0740, 1031
Hitachi . . . . .	0692	Matsui . . . . .	1722, 1757
Hiteker . . . . .	0699	Maxdorf . . . . .	0815
Hoehner . . . . .	0678, 0740, 0858, 1031, 1251	Maxim . . . . .	0740
Home Electronics . . . . .	0757, 0797	MBO . . . . .	0717, 0757, 1757
Home Tech Industries . . . . .	1251	McIntosh . . . . .	1560
Hoyo . . . . .	0692	MDS . . . . .	0740
Humax . . . . .	0673	Mecotek . . . . .	0797
Hyundai . . . . .	0793, 0810, 1255	Medion . . . . .	0657, 0678, 0743, 0810, 0858
ICP . . . . .	1180	Medion . . . . .	0906
Ingelen . . . . .	0815	MEI . . . . .	0817
Initial . . . . .	0744	Memorex . . . . .	0717, 0722, 0858
Integra . . . . .	0598, 0654, 1661	Memory . . . . .	1110
IRT . . . . .	0810	Metronic . . . . .	0717
ISP . . . . .	0722	Metz . . . . .	0598, 0740
Jamo . . . . .	1063	MiCO . . . . .	0750, 1248, 1281
Jaton . . . . .	0692	Microboss . . . . .	0745
JDB . . . . .	0757	Micromaxx . . . . .	1722
Jeken . . . . .	0726	Micromedia . . . . .	0530, 0566
JMB . . . . .	0722	Micromega . . . . .	0566
JNC . . . . .	0699	Microsoft . . . . .	0549
JVC . . . . .	0530, 0566, 0650, 0894, 1191	Microstar . . . . .	0858
JVC . . . . .	1967	Minax . . . . .	0740
jWin . . . . .	1078	Minerva . . . . .	0732
Karcher . . . . .	0810	Minoka . . . . .	0797
Kawasaki . . . . .	0817	Mintek . . . . .	0744
Kendo . . . . .	0726, 0740, 0858	Mirror . . . . .	0906
Kennex . . . . .	0740, 0797	Mitsubishi . . . . .	0740

Mizuda	0797, 0845	Roadstar	0716, 0717, 0726, 0740, 0757
Monyka	0692		0845, 0860, 0906, 1078
Mustek	0757, 1757	Ronin	0737
Mx Onda	0678, 1281	Rotel	0650
Myryad	1281	Rowa	0744, 1031
Mystral	0858	Saba	0578, 0678
NAD	0618, 0768	Saivod	0858
Naiko	0797, 1031	Salora	0768
NEC	0896	Samsung	0517, 0600, 0847
Nesa	0744	Sansui	0722, 0743, 0795, 1180, 1255
Neufunk	0692		172
Nevir	0797, 0858	Santosh	1142
Nintaus	1078	Sanyo	0697, 0722, 0740
Nordmende	0858	Scan	0732
Nu-Tec	1255	ScanMagic	0757
Olidata	0699	ScanSonic	1722
Omni	0717, 0860, 1131	Schaub Lorenz	0797, 0815, 1142, 1178
Onkyo	0530, 0654, 1639	Schneider	0566, 0678, 0732, 0740
Oppo	1251		0806, 0810, 0815, 0817, 0858, 0896
Optimus	0598		1128, 1180
Orava	0845	Scientific Labs	0795
Orion	0722, 1722	Scott	0678, 0699, 0745, 1063
Oritron	0678	Seeltech	1251
Ormond	0740	SEG	0692, 0740, 0795, 2021
P&B	0845	Semp	0530
Pacific	0722, 0740, 0795, 0817, 0858	Shanghai	0699
Packard Bell	0858	Sharp	0657, 0740
Palladium	0722, 0806, 1933	Sherwood	0744, 0768, 0797
Palsonic	0699, 0716, 0879, 1110	Shinco	0744
Panasonic	0517, 0530, 1517, 1935	Shinsonic	0560
Panda	0744	Sigmathek	1251
Paramount Pictures	0806	Siltex	1251
peeKTon	1251	Silva	0815
Philco	0717, 0815, 0817	Silva Schneider	0858, 1174
Philips	0566, 0530, 0673, 1367, 1941	Singer	0717, 0743, 0795
Phonotrend	0726	Sinudyne	1248
Pioneer	0517, 0598, 1929	Skantic	0566, 0740
Plu2	1117	Skymaster	0757, 0795
Polk Audio	0566	Skysonic	0793
Portland	0797	Skyworth	0793
Prima	0793, 1255	Sliding	1142
Prima Electronic	0793	Slim Art	0797
Prinz	0858	SM Electronic	0717, 0757, 0795
Prism	0732, 0858, 1180	Smart	0732, 0740, 0745
Proceed	0699	Sonashi	0743, 0858
Proline	0678, 0699, 0713, 0737, 0860	Sonic Blue	0810, 0896
	1031	Sony	0560, 0600, 0799, 0891, 1097
Proscan	0549		1560, 1930, 1931
Proson	0740	Soundmaster	0795
Prosonic	0726	Soundmax	0795
ProVision	0726	Soundwave	0810
Pye	0673	Standard	0678, 0795, 0815, 0858
QONIX	1078	Starmedia	0845, 1251
Qwestar	0678	Strong	0740
Radionette	0768, 0896, 1933	Sunkai	0797
Raite	0692	Sunstech	0858
RCA	0549, 0598, 0744, 0817	Sunwood	0815
REC	0517, 0716, 0793	Supervision	0795
Red star	0797, 0815	SVA	0699, 0744
Reoc	0795	Sylvania	0657
Revoy	0726	Synn	0795
Rio	0896	Tandberg	0740, 1722, 2021

Tatung	0797, 1722
Teac	0598, 0722, 0744, 0768, 0795
	0817, 0860
Technica	1124, 1722
Technics	0517
Technika	0797, 0858, 1124, 1142, 1722
Technisson	1142
Technosonic	0757, 1078, 1142
Techwood	0740
Tedalex	0717, 1031, 1255
Telefunken	0817, 0860, 1110, 1255
Teletch	0740, 0795
Tensai	0678, 0717, 0797
Tevion	0678, 0795, 0860, 1063
Theta Digital	0598
Thomson	0549, 0578
Tokai	0692, 0815, 0817
Tokiwa	0743
Top Suxess	1251
Toshiba	0530, 0722
TRANS-continents	0858
Transonic	0757
TSM	1251
TYT	0732
Umax	0717, 1178
United	0699, 0722, 0815, 1110, 1124
	1142, 1255
Universum	0618, 0740, 0768, 0806
	0817, 0896
Urban Concepts	0530
Venturer	0817
Vestel	0740, 2021
Vieta	0732
Viewmaster	1111, 1251
Voxson	0717, 0757, 0858
Vtrek	1255
Waitec	1178, 1251
Walkvision	0744
Welkin	0858
Wellington	0740
Welltech	1248
Weltstar	0740
Wesder	0726
Wharfedale	0713, 0723, 0817
Wilson	0858
Windsor	0740
Windy Sam	0600
WIZE	1142
Woxter	1178, 1251
Xbox	0549
Xenius	0817
XLogic	0795, 1255
XMS	0716, 0797, 0815
Xoro	1248
Yakumo	1031
Yamada	1031, 1178
Yamaha	0517, 0566, 0673
Yamakawa	0692, 0737, 0792, 1131
Yukai	0757, 1757
Zenith	0530, 0618, 0768, 0896, 1933

## SETUP CODES FOR STB SAT

@sat	1327
@Sky	1361
1+	0579
ABsat	0150, 0695, 0740
ADB	0669, 1394, 1500, 1518
ADT	0579
AGS	0695
Akai	0227
Akena	0695
Alba	0448, 0482, 0740, 0761, 1311
Aldes	0315, 0761
Allsat	0227, 0761
Allsonic	0315, 0396
Alltech	0740
Allvision	1361
Alpha	0695, 0227
Altai	0423
Amitronica	0740
Ampere	0423
Amstrad	0270, 0423, 0528, 0740, 0769
	0874, 0890, 0912, 1140, 1202
Anglo	0740
Ankaro	0315, 0396, 0740, 1306
AntSat	1110
Anttron	0448
Apollo	0448, 0482
Arcon	0861, 1102, 1306
Armstrong	0270
Arnion	1327
ASA	0424
ASAT	0400, 0227
Asat	0227, 0400
ASCI	1361
ASLF	0740
AssCom	0880
Astacom	0695
Astra	0270, 0400, 0540, 0566, 0634
	0740
Astro	0385, 0396, 0528, 0634, 0685
	1140
Athena	0695
Atsat	1327
AtSky	1361
Aura	0566
Aurora	0669
Austar	0669, 0890, 0890, 1203
Avalon	0423
Axiel	0695
Axis	0396, 0861, 0907, 1138
Beko	0482
Best	0396
Bestar	0270
Black Diamond	1311
Blue Sky	0740
Boca	0270, 0540, 0740, 0821
Boston	0695
Brainwave	0685, 1321
British Sky Broadcasting	0874, 1202, 1874
Broco	0740
BskyB	0874, 1202

BT	0695, 1323	Emme Esse	0396, 0529, 0898
BT Satellite	0695	eMTech	1241
Bubu Sat	0740	Engel	0740
Bush	1311	EP Sat	0482
Cambridge	0528	Eurieult	0912
Canal Digital	0880	Eurocrypt	0482
Canal Sat Pilotime	1366	Europa	0528, 0634, 0890
Canal Satellite	0319, 0880	European	0821
Canal+	0880	Europhon	0634
Century	0883	Eurosat	0270
Cherokee	0150	Eurosky	0270, 0396, 0528, 0634
Chess	0740, 1361	Eurostar	0566, 0634, 0845, 0907, 0925
CityCom	0421, 0634, 0825, 0845	Eutelsat	0740
	1102, 1203	Eutra	0825
Clemens Kamphus	0423, 0529, 0861	Exator	0448
CNS	1394	Fenner	0184, 0396, 0695, 0740
Cobra	0423	Ferguson	0482, 1318
Colombia	0695	Fidelity	0528
Columbus	0695	Finlandia	0482
Commlink	0315	Finlux	0424, 0482
Comtec	0315	Flair Mate	0740
Condor	0396, 0634	Fortec Star	1110
Connexions	0423	Foxtel	0482, 0747, 1203, 1383
Conrad	0396, 0528, 0634	Fracarro	0448, 0695, 0898
Contec	0421	Freecom	0448, 0528, 0761
Crown	0270	Freesat	0634
Cryptovision	0482	Fresat	0912
Cyrus	0227	FTEmaximal	0358, 0396, 0683, 0740
Daeryung	0423		0890, 1583
Daewoo	0400, 0448, 0740, 1138, 1323	Fuba	0396, 0421, 0423, 0448, 1241
Däumling	0821	Galaxis	0315, 0396, 0683, 0861, 0880
D-box	0750, 0900, 1154		0890, 1138
Delfa	0890	Gardiner	0845
Deltasat	1102	Garnet	1102
Dew	0400	GbSAT	1241
Dgtec	1269, 1569	General Satellite	1203
Digatron	1321	GF	0861
Digitality	0634	Globo	1653
DigiLogic	1311	GMI	0270
DigiQuest	0890, 1327, 1500	GOD Digital	0227
DigitAll World	1254	Gold Box	0319, 0880
Dijam	1323	GoldStar	0421
DiPro	1394	Goodmans	0482, 1311
DirecTV	0126	Gradiente	0126, 0883
Discovery	0695	Granada	0482
Distratel	0912	Grundig	0832, 0874, 0880, 1318, 1357
DMT	1102	Hantor	0448
DNT	0227, 0423	Harting & Helling	0529
Dream Multimedia	1264, 1464, 1564	Hauppauge	1321
	1664	HB	1241
DST	0448	HDT	1186
Dual	0400	HE@D	1306
Dune	0396	Heliocom	0634
Durabrand	1311	Helium	0634
Echostar	0194, 0423, 0637, 0695	Hinari	0448
	0740, 0880, 0898, 1350, 1500, 1504	Hirschmann	0314, 0396, 0423, 0424
Einhell	0270, 0315, 0448, 0528, 0540		0528, 0529, 0634, 0825, 1138
	0740, 0821		0469
Elap	0740, 1594	Hitachi	0482, 1311
Elsat	0740	Homecast	1241
Elta	0227, 0396, 0448	Houston	0423, 0695
Emanon	0448	Humax	0890, 1203, 1252, 1454, 1595



Huth . . . . .	0270, 0315, 0529, 0634, 0821	Mediacom . . . . .	1233
	1102	Mediamarkt . . . . .	0270
Hwalin . . . . .	0912	MediaSat . . . . .	0319, 0528, 0880
Hyundai . . . . .	1102, 1186	Medion . . . . .	0396, 0740, 1102, 1361, 1653
iCan . . . . .	1394	Medison . . . . .	0740
ID Digital . . . . .	1203	Mega . . . . .	0227
Ingelen . . . . .	0423	Meletronic . . . . .	0845
Innova . . . . .	0126	Metronic . . . . .	0270, 0315, 0448, 0740, 0845
International . . . . .	0270		0912, 1306, 1361
Interstar . . . . .	1241	Micro . . . . .	0528, 0634, 0740, 1321
Intertronic . . . . .	0270	Micro Elektronik . . . . .	0740
Intervision . . . . .	0634, 0655	Micro Technology . . . . .	0566
InVideo . . . . .	0898	Micromaxx . . . . .	0396
Italtel . . . . .	0898	Microstar . . . . .	1102
Jadeworld . . . . .	0669	Microtec . . . . .	0740
Jaeger . . . . .	1361	Mitsubishi . . . . .	0482
Kamm . . . . .	0740, 0907	Mitsumi . . . . .	0540
Kaon . . . . .	1327	Morgan's . . . . .	0227, 0270, 0540, 0740, 0821
KaTelco . . . . .	1138	Motorola . . . . .	0883
Kathrein . . . . .	0150, 0227, 0358, 0385, 0421	Multichoice . . . . .	0669
	0469, 0531, 0649, 0685, 0740, 0845	Multistar . . . . .	0358
	0925, 1594, 0695	Myryad . . . . .	0227
Kenwood . . . . .	0880	Mysat . . . . .	0740
Key West . . . . .	0821	NEOTION . . . . .	1361
Klap . . . . .	0695	Netgem . . . . .	1349
Kolon . . . . .	0448	Netsat . . . . .	0126
Konig . . . . .	0634	Neuf TV . . . . .	1349
Koscom . . . . .	0861	Neuhaus . . . . .	0528, 0634, 0683, 0740, 0861
Kosmos . . . . .	0358, 0469, 0529	Neusat . . . . .	0740, 0815, 0861, 1306
KR . . . . .	0761, 0825	Newton . . . . .	0423
Kreiling . . . . .	0685	Nikko . . . . .	0227, 0270, 0740, 0761
Kreismeyer . . . . .	0315	Nokia . . . . .	0424, 0482, 0750, 0778, 0880
K-SAT . . . . .	0740		0900, 1050, 1154, 1337, 1338, 1365
Kyostar . . . . .	0448		1750
L&S Electronic . . . . .	0396, 1361	Nordmende . . . . .	0448, 0482, 1638
Labgear . . . . .	1323	NTC . . . . .	0529, 0825
LaSAT . . . . .	0184, 0270, 0396, 0540, 0634	Octagon . . . . .	0400, 0448
Lenco . . . . .	0396, 0400, 0448, 0634, 0740	OctalTV . . . . .	1321
Lenoxx . . . . .	1638	Okano . . . . .	0270, 0358, 0469, 0529, 0695
Lenson . . . . .	0528	Optex . . . . .	0421, 0579, 0740, 0861, 1638
Lexus . . . . .	0227	Optima . . . . .	0529
LG . . . . .	1102	Orbis . . . . .	1361
Lifesat . . . . .	0184, 0396, 0740	Orbit . . . . .	0400
Lodos . . . . .	1311	Orbitech . . . . .	0184, 0448, 0528, 0861
Loewe . . . . .	0270	Oxford . . . . .	0695
Logik . . . . .	1311	Pace . . . . .	0227, 0356, 0482, 0747, 0818
Logix . . . . .	1102		0874, 0880, 0894, 1202, 1350, 1383,
Lorenzen . . . . .	0634, 0769, 0821, 0894, 1321		1450
Lupus . . . . .	0396	Pacific . . . . .	1311
Luxor . . . . .	0528	Pacific Satellite . . . . .	0861
M & B . . . . .	0566	Packard Bell . . . . .	1138
Manata . . . . .	0695, 0740	Palladium . . . . .	0270, 0423, 0448, 0528
Manhattan . . . . .	0482, 0815, 0861, 1110, 0695	Palsat . . . . .	0184, 0528
Marantz . . . . .	0227	Panarex . . . . .	1186
Mascom . . . . .	0469	Panasonic . . . . .	0482, 0874, 1331, 1347
Maspro . . . . .	0740	Panda . . . . .	0482, 0634, 0861
Master's . . . . .	0421	Pansat . . . . .	1186
Matsui . . . . .	1311	Patriot . . . . .	0695
Max . . . . .	0634	Philips . . . . .	0126, 0227, 0319, 0482, 0695
Maximum . . . . .	1102, 1361		0832, 0845, 0880, 0883, 0925, 1141
MDS . . . . .	1252		1145, 1560, 1647, 1670
Mediabox . . . . .	0319, 0880		

Phonotrend	0315, 0529, 0683, 0815	ServiSat	0740
	0890	Siemens	1684
Pilotime	1366	Skantin	0740
Pino	1361	SKR	0740
Pioneer	0319, 0356, 0880, 1335	SKY	0126, 0874, 0883, 1202, 1874
Pixx	0579		1875
Planet	0423, 0898	SKY Italia	0880, 1874, 1875
Plasmatic	0469	Sky+	1202
PMB	0740	Skymaster	0184, 0315, 0655, 0740
Polytron	0421, 0423		0907, 1102, 1638
Portland	1323	Skymax	0227, 0566
Predki	0448	Skyplus	1361
Preisner	0423, 0540, 0821, 1140, 0270	SkySat	0184, 0528, 0634, 0740
Premier	0319, 0529	Skyvision	1361
Premiere	0319, 0750, 0900, 0880	SL	0270, 0769, 1321
	1203, 0685	SM Electronic	0184, 0740
Primacom	1138	Smart	0423, 0740, 0821, 1140
Pro Visat	0761	Sony	0309, 0319, 0874, 0880, 1585
Profile	0695		0482
Promax	0482	SR	0540
Prosat	0315, 0655	Star Trak	0448
Pyxis	0861	Starion	0566
QNS	1394	Starlite	0227
Quadral	0315, 0396, 0655, 0695	Stream	1874, 1875
Quelle	0634, 0769	Strong	0396, 0400, 0448, 0740, 0847
Radiola	0227		0880, 1186, 1311, 1327, 1653
Radix	0421, 0423, 1140	Sumida	0270
RCA	1318	Sunkai	0150
Rebox	1241	Sunny	1327
Red Star	0396	Sunny Sound	0396
RFT	0227, 0315	Sunsat	0740
Roadstar	0740, 0880	Sunstar	0270, 0396, 0540, 0669, 0821
Romsat	0448	Systec	1361
Rover	0396, 0655, 0740	Tantec	0482
Saba	0634, 0761, 0912	Tarbs	1252
Sabre	0482	Tatung	0482
Sagem	0847, 1141, 1280, 1334	Teac	1252, 1254, 1349
Samsung	0314, 0880, 0890, 1233, 1270	TechniSat	0184, 0227, 0423, 0482
	1320, 1485		0528, 0890, 1222, 1224, 1349
SAT	0528	Technosat	1233
Sat Control	1327	Technowelt	0634
Sat Partner	0448, 0528, 0529, 0761	Techwood	1311, 1653
Sat Team	0740	Teco	0270, 0400, 0540
Satcom	0634	Telasat	0634
Satec	0740, 0861	Tele System	0423, 1638
Satelco	0396	Tele System Electronic	1638
Satline	0655	Teleciel	0761
Satpartner	0529, 0761	Telefunken	0448
Satplus	0184	Teleka	0270, 0423, 0528, 0634, 0825
Satstation	1110		0861, 0469
Schaub Lorenz	1241	Telestar	0184, 0528, 1361
Schneider	0184, 0695, 0832, 1233	Teletech	0907
Schwaiger	0184, 0421, 0531, 0579	Televes	0482, 0528, 0579, 0761, 1241
	0634, 0890, 0912, 1102, 1110, 1138		1327
	1361	Telewire	0683
Sedea Electronique	0448, 1233, 1653	Tensai	0400
Seemann	0270, 0423	Tevion	0740, 1594
SEG	0396, 0448, 0566, 0769, 1102	Thomson	0319, 0482, 0634, 0695
	1653		0740, 0847, 0874, 0880, 1073, 1202
Seleco	0898		1318, 1525, 1927
Septimo	0912	Thorn	0482
Serino	0637	Tioko	0270

Tokai	0227
Tonna	0482, 0528, 0695, 0740, 0861
	1638
Topfield	1233
Toshiba	0482, 1473
TPS	0847, 1280, 1334
Trend Plain	0540
Trendline	0540
Triasat	0528
Triax	0227, 0423, 0528, 0740, 0880
	1140, 1254, 1318
Trio	1102
Tristar	0400
Turnsat	0740
Twiner	0740
UEC	1383
Uher	0184
Uniden	0861
Unisat	0227, 0270
Universum	0424, 0634, 0683, 0769
Vega	0396
Ventana	0227
Vestel	0769
Visionic	1306
Visiosat	0579, 0740
Vortec	0314, 0448
VTech	0845
Wela	0740
Welltech	0184
Wetekom	0184, 0528
Wewa	0482
Wharfedale	1311
Wibo	0270
Wintergarten	0315
Wisi	0423, 0482, 0528, 0579, 0634
	0665, 1377, 0861
Worldsat	0150, 1241, 1350, 0695
Xanadu	0579
Xcom	0150, 0695
Xcom Multimedia	0695
XMS	1102
Xrypton	0396
Xsat	0150, 0695, 0740, 0874, 1241
	1350
Xtreme	1327
Zehnder	0358, 0396, 0421, 0531
	0579, 0769, 0845, 1102, 1361
Zenith	0883
Zeta Technology	0227
Zodiac	0423
Zwergnase	0270, 0821

## SETUP CODES FOR STB CAB

ABC	0030
Auna	0304
Austar	0303
Birmingham Cable Communications	0303
British Telecom	0030
BT Cable	0030
Cable & Wireless	1095
Canal plus	0470
Comcrypt	0470
Contec	0046
Daeryung	0304
Filmnet	0470
Filmnet Cablecrypt	0470
France Telecom	0478, 0844
Funai	0046
General Instruments	0303, 0030
HyperVision	0646
Jerrold	0030, 0303
Kabelvision	0030
Macab	0844
Melita	0030
Mnet	0046, 0470
Motorola	0303
Mr Zapp	0844
Multichoice	0046, 0470
Noos	0844
NTL	0030, 0304, 0087, 1095
Oak	0046
Ono	1095
Optus	0303, 1087
Pace	1087, 1095
Philips	0313, 0646, 0844, 1175, 0478
PVP Stereo Visual Matrix	0030
Sagem	0844
Samsung	1087
Scientific Atlanta	0304
Starcom	0030
Supercable	0303
Tele Danmark	0646
Tele+1	0470
Telepiu	0470
Telewest	1095
Torx	0030
Trans PX	0303
TS	0030
Tudi	0313, 0646
United Cable	0030
UPC	1175
US Electronics	0303
Visiopass	0478, 0844

## SETUP CODES FOR STB VID

ABS	1299
Alienware	1299
CyberPower	1299
Gateway	1299
Hauppauge	1435
Hewlett Packard	1299
Howard Computers	1299
HP	1299
Hush	1299
BUYPOWER	1299
Linksys	1299
Media Center PC	1299
Microsoft	1299
Mind	1299
Niveus Media	1299
Northgate	1299
Packard Bell	1299
Philips	1299, 1435, 1796
Ricavision	1299
Sony	1299
Stack 9	1299
Systemax	1299
Tagar Systems	1299
Toshiba	1299
Touch	1299
Viewsonic	1299
Voodoo	1299
ZT Group	1299

## SETUP CODES FOR VCR

Accent	0099
Admiral	0075, 0236
Adventura	0027
Adyson	0099
Aiko	0305
Aim	0305, 0375
Aiwa	0027, 0059, 0064, 0236, 0334 0375, 0379, 1164
Akai	0064, 0068, 0080, 0133, 0267 0342, 0375, 0379
Akiba	0099
Akitan	0322
Akura	0099, 0068
Alba	0027, 0099, 0108, 0236, 0305 0322, 0342, 0375, 0379
Allegro	1164
Allorgan	0267
Allstar	0108
America Action	0305
American High	0062
Amstrad	0027, 0099, 0305, 0352, 0359
Anam	0064, 0189, 0253, 0267, 0305
Anam National	0189, 0253, 1189, 1589
Anitech	0099
Ansonic	0027
Aristona	0108, 0173
ASA	0064, 0108
Asha	0267
Asuka	0099, 0064, 0065
Audiosonic	0305
Audiovox	0064, 0305
AVP	0027, 0379
Awa	0064, 0070, 0305
Baird	0133, 0305, 0068, 0027, 0131
Basic Line	0305, 0236, 0073, 0099, 0131
Beaumark	0267
Beko	0131
Bell & Howell	0131
Bestar	0305
Black Panther	0305
Black Panther Line	0305
Blaupunkt	0253, 0108, 0189, 0430, 0222
Blue Sky	0064, 0099, 0236, 0305, 0375 0379, 1164
Bondstec	0099
BPL	0073
Brandt	0068, 0214, 0348, 0520, 0233 0347
Brandt Electronique	0068
Brinkmann	0236, 0375
Brionvega	0371
Broksonic	0236, 0322, 0375
Bush	0099, 0305, 0379, 0375, 0027 0108, 0236, 0342
Calix	0064
Canon	0062
Carena	0236, 0108
Carrefour	0072
Carver	0108, 0173
Casio	0027

Cathay	0305	Flint	0236, 0375
CCE	0099, 0305	Frontech	0099
Centrum	0620	Fuji	0060, 0062
CGE	0068, 0027	Fujitsu	0027, 0072
Changhong	0075, 0108	Fujitsu General	0064
Cimline	0099, 0236	Funai	0027, 0620
Cineral	0305	Galaxis	0305
CineVision	1164	Garrard	0027
Citizen	0064, 0305	GE	0062, 0075, 0253, 0267, 0347, 0834
Clatronic	0027, 0099	GEC	0108
Colt	0099	General	0072
Combitech	0379	General Technic	0375
Condor	0305	Genexxa	0131
Craig	0064, 0074, 0099, 0267	Go Video	0267, 0459, 1164
Crown	0064, 0099, 0305	Goldhand	0099
Curtis Mathes	0062, 0068, 0189	GoldStar	0064, 0065, 0236, 0253, 1164
Cybernex	0267	Goodmans	0099, 0064, 0108, 0375
Cyrus	0108		0236, 0430, 0379, 0027, 0305
Daewoo	0072, 0073, 0131, 0236, 0305	GPX	0064
	0379, 1164	Gradiente	0027
Dansai	0099, 0305	Graetz	0068, 0131, 0267, 0371
Dantax	0379	Granada	0131, 0073, 0075, 0108, 0027
Daytron	0305		0267, 0064, 0253, 0069
De Graaf	0069, 0073, 0075, 0108	Grandin	0027, 0064, 0099, 0236, 0305
	0131, 0193	Grundig	0034, 0222, 0376, 0253, 0379
Decca	0068, 0094, 0108, 0236, 0379		0430, 0347, 0099, 0108, 0374, 0375
	0027	Haaz	0375
Deitron	0305	Hanimex	0322, 0379
Denko	0099	Hanseatic	0064, 0065, 0108, 0236
Denon	0069	Haojie	0267
Diamant	0064	Harley Davidson	0027
Diamond	0375	Harman/Kardon	0065, 0108, 0173
Domland	0236	Harwood	0099
Dual	0027, 0068, 0108, 0305, 0375	HCM	0099
Dumont	0027, 0108, 0131, 0132	Headquarter	0073
Durabrand	0065, 0620	Hinari	0099, 0236, 0379, 0068, 0115,
Dynatech	0027		0305, 0235, 0267
Elbe	0305, 0065	HI-Q	0074
Elcatech	0099	Hisawa	0236, 0379
Electrohome	0064, 0070	Hischito	0072
Electrophonic	0064	Hitachi	0069, 0193, 0267, 0108, 0131
Elin	0267		0027, 0064, 0068, 0073, 0132
Elsay	0099		0430, 0620
Elta	0099, 0305	Hoeher	0305
Emerex	0059	Hornophone	0108
Emerson	0027, 0062, 0064, 0070	Hughes Network Systems	0069
	0072, 0099, 0115, 0235, 0236, 0267	Hypson	0027, 0064, 0099, 0236, 0305
	0305, 0322, 0375, 0620	Imperial	0267, 0027
ESA	1164	Ingersoll	0236, 0267
ESC	0305, 0267	Inno Hit	0267, 0099
Etzuko	0099	Interbuy	0064, 0099
Ferguson	0027, 0068, 0080, 0305, 0347	Interfunk	0108, 0131
	0348, 0520	Internal	0305
Fidelity	0027, 0099, 0267, 0352, 0379	International	0064, 0305
	0459	Intervision	0305, 0375, 0027, 0236
Finlandia	0027, 0034, 0064, 0069, 0070	Irradio	0099, 0108, 0064
	0073, 0075, 0108, 0131, 0133, 0193	ITT	0133, 0068, 0411, 0131, 0267
	0253, 0411		0073, 0371
Finlux	0027, 0069, 0108, 0131, 0132	ITV	0064, 0305
Firstline	0064, 0070, 0072, 0099, 0115	JBL	0305
	0236, 0305, 0375, 1164, 0069	Jensen	0068
Fisher	0074, 0131, 0065, 0073	JMB	0236, 0375, 0379

Joyce	0027	Micormay	0375
JVC	0068, 0072, 0094, 0108, 0233	Micromaxx	0236
	0411, 1189	Minerva	0222
Kaisui	0099	Minolta	0069, 0132
Kambrook	0064	Mitsubishi	0027, 0068, 0070, 0075
Karcher	0108, 0305		0094, 0108, 0834
KEC	0064, 0305	Motorola	0062, 0075
Kendo	0133, 0236, 0375, 0099, 0305	MTC	0027, 0267
	0342	Multitec	0064
Kenwood	0065, 0068, 0094, 0411	Multitech	0027, 0099
KIC	0027	Murphy	0027
Kimari	0074	Myryad	0108
Kioto	0375	NAD	0131
KLH	0099	Naiko	0375
Kneissel	0064, 0236, 0305, 0375, 0379	National	0253, 0189
Kodak	0062, 0064	Nebula Electronics	0060
Kolin	0068, 0070	NEC	0062, 0064, 0065, 0068, 0075
Kolster	0236		0094, 0131, 0233, 0305, 1164
Korpel	0099	Neckermann	0068, 0235, 0371, 0108
Kuba Electronic	0074	Nesco	0099
Kyoto	0099	Neufunk	0236
Lenco	0305	Newave	0064
Leyco	0099, 0115	Nikkai	0099, 0305
LG	0064, 0065, 0069, 0072, 0080	Nikko	0064
	0236, 1164	Noblex	0267
Lifetec	0236, 0375	Nokia	0131, 0133, 0073, 0371, 0267
Lloyd's	0027, 0235		0075, 0069, 0108, 0305, 0342, 0068
Loewe	0064, 0108, 0132, 0189, 1589	Nordmende	0068, 0411, 0214, 0521
Loewe Opta	0108, 0189		0555, 0520, 0094, 0347, 0348
Logik	0099, 0133, 0236, 0267	Nu-Tec	0236
Lumatron	0620, 1164	Oceanic	0075, 0131, 0068, 0073, 0027
Lunatron	1164		0108, 0133
Lux May	0099	Okano	0099, 0236, 0305, 0342, 0375
Luxor	0133, 0073, 0131, 0074, 0070	Olympus	0062, 0253
	0075, 0342	Optimus	0064, 0075, 0131, 0189, 0459
LXI	0064		0620, 1189
M Electronic	0064, 0027, 0065	Orbit	0099
Magnasonic	0305, 0620	Orion	0236, 0379, 0322, 0375, 0115
Magnavox	0108, 0430, 0027, 0062, 0620		0235, 0376
Magnin	0267	Osaki	0027, 0064, 0099
Manesth	0072, 0099, 0108, 0236	Osume	0099
Marantz	0108, 0065, 0322, 0236, 0062	Otake	0236
	0173	Otto Versand	0108
Mark	0027, 0305	Pace	0379
Marta	0064	Pacific	0027, 0375
Master's	0305	Palladium	0099, 0342, 0236, 0267
Matsui	0236, 0375, 0064, 0235, 0115		0375, 0064, 0068
	0267, 0379, 0359, 0305, 0322	Palsonic	0027, 0099
Matsushita	0062, 0189, 0253, 1189	Panasonic	0062, 0189, 0253, 0863, 0864
Mediator	0108		1189, 1589
Medion	0236, 0375, 0379	Pathe Cinema	0070
MEI	0062	Pathe Marconi	0068
Melectronic	0027, 0064, 0065	Penney	0062, 0064, 0065, 0069, 0267
M-Electronic	0064	Pentax	0069, 0132
Memorex	0027, 0062, 0064, 0073	Perdio	0027, 0236
	0074, 0075, 0131, 0189	Philco	0027, 0062, 0065, 0099, 0236
Memphis	0099		0253
Metronic	0108	Philips	0027, 0062, 0108, 0173, 0253
Metz	0064, 0108, 0189, 0222, 0253		0411, 0430, 0620, 0673, 1296
	0374, 0863, 0864, 1189, 1589	Phoenix	0305
MGA	0070, 0267	Phonola	0108
MGN Technology	0267	Pilot	0064

Pioneer	0069, 0094, 0108, 0189	Shinco	0027
	0233, 1830	Shintom	0099, 0131
Polk Audio	0108, 0173	Shivaki	0064
Portland	0305	Shogun	0267
Prinz	0027, 0115	Shorai	0115
Profi-Tronic	0108, 0267	Siemens	0222, 0034, 0108, 0173
Proline	0027, 0305, 0347		0430, 0064, 0073, 0131, 0347, 0374
Prosonic	0236, 0305	Sierra	0108
Protec	0099	Silva	0064
Protech	0108	Silver	0305
Provision	0305	Singer	0072, 0099, 0375
Pye	0027, 0108	Sinudyne	0108, 0236, 0379
Quarter	0073	Smaragd	0375
Quartz	0073	Sonic Blue	1164
Quasar	0062, 0189, 0305, 1189	Sonitron	0074
Quelle	0108, 0371	Sonneclair	0099
Radialva	0064, 0099, 0075	Sonoko	0305
Radiola	0108	Sonolor	0075, 0073
Radionette	0064, 1164	Sontec	0064
RadioShack	0027, 0064	Sony	0059, 0133, 0060, 0027, 0062
Radix	0064		1059
Randex	0064	Soundwave	0064, 0236, 0375
Rank Arena	0068	Ssangyong	0099
RCA	0027, 0062, 0069, 0075, 0132	Standard	0305
	0133, 0253, 0267, 0347, 0834	Starlite	0064, 0131
Realistic	0027, 0062, 0064, 0073, 0074	Stern	0305
	0075, 0131	Stern	0305
Reoc	0375	STS	0069
Rex	0068, 0411	Sunkai	0236, 0305, 0322, 0375
RFT	0099, 0430	Sunstar	0027
Rio	1164	Suntronic	0027
Roadstar	0064, 0099, 0108, 0267, 0305	Sunwood	0099
Royal	0099	Supra	0064, 0305, 0375, 0267
Saba	0068, 0214, 0348, 0411, 0521	Sylvania	0027, 0062, 0070, 0108, 0620
	0233, 0305, 0347	Symphonic	0099, 0027, 0620
Saisho	0115, 0235, 0236, 0375	T+A	0189
Salora	0070, 0073, 0131, 0133	Taisho	0236
Sampo	0064, 0075	Taisho	0115, 0236
Samsung	0072, 0080, 0267, 0459	Tandberg	0305
Sanky	0075	Tandy	0027, 0131
Sansui	0027, 0068, 0094, 0099, 0133	Tashiko	0075, 0064, 0027, 0108, 0267
	0236, 0375	Tatung	0027, 0068, 0070, 0072, 0075
Sanyo	0073, 0074, 0075, 0094, 0131		0080, 0094, 0108, 0236, 0375, 0379
	0236, 0267, 0375, 1164	Tchibo	0375
Saville	0267, 0305, 0379	TCM	0375
SBR	0108, 0173	Teac	0027, 0064, 0068, 0099, 0305
Schaub Lorenz	0027, 0068, 0131, 0133		0334, 0430, 0620
	0342, 0371, 0375	TEC	0305, 0099
Schneider	0027, 0064, 0069, 0099	Tech Line	0099
	0108, 0173, 0267, 0305, 0375, 0379	Technics	0062, 0108, 0189, 0253, 1189
	1164	Teco	0062, 0064, 0065, 0068, 0075
Scott	0070, 0072, 0620	Tedex	0064, 0236, 0375
Sears	0027, 0062, 0064, 0069, 0073	Teknika	0027, 0062, 0064
	0074, 0131, 0132	Teleavia	0068, 0520, 0214
Seaway	0305	Telefunken	0214, 0068, 0411, 0520
SEG	0099, 0108, 0267, 0305		0521, 0620, 0233, 0236, 0305
SEI-Sinudyne	0108		0347, 0348
Seleco	0064, 0068, 0411	Telerent	0253
Semp	0072	Telestar	0064
Sentra	0099	Teletech	0027, 0099, 0305
Sentron	0099	Tenosal	0099
Sharp	0064, 0075, 0236, 0596, 0834	Tensai	0027, 0099, 0305

Tevion	0236, 0375
Texet	0305
Thomas	0027
Thomson	0068, 0411, 0348, 0520 0521, 0555, 0347, 0094, 0305
Thorn	0064, 0068, 0131
TMK	0235, 0267
Tokai	0064, 0099
Topline	0375
Toshiba	0072, 0068, 0108, 0430, 0069 0070, 0094, 0236, 0379, 0411, 0459
Totevision	0064, 0267
Towada	0099
Towika	0099
Toyoda	0305
Tradex	0108
Triad	0305
Triumph	0235
Uher	0064, 0267, 0371
Ultravox	0371, 0305
Unitech	0267
United	0375
United Quick Star	0305
Universum	0352, 0064, 0133, 0375 0222, 0236, 0027, 0267, 0108, 0131 0430, 1164
Vector	0072
Vector Research	0065
Victor	0068, 0094, 0411
Video Concepts	0072
Video Technic	0027
Videomagic	0064
Videosonic	0267
Villain	0027
Wards	0027, 0060, 0062, 0065, 0069 0072, 0073, 0074, 0075, 0099 0108, 0267
Watson	0108, 0379
Weltblick	0064
Wewa	0520
Wharfedale	0620
White Westinghouse	0099, 0236, 0305 0371
World	0375
XR-1000	0027, 0062, 0099
Yamaha	0065, 0068
Yamashi	0099, 0305
Yamishi	0099, 0305
Yokan	0099
Yoko	0064, 0099, 0267
Yoshita	0099
Zenith	0027, 0060, 0236, 1164
ZX	0236, 0375, 0379



## TV

Equipment

Brand

Model number

Number of original remote

Code

## DVD

Equipment

Brand

Model number

Number of original remote

Code

## STB SAT

Equipment

Brand

Model number

Number of original remote

Code

## STB CABLE

Equipment

Brand

Model number

Number of original remote

Code

## STB VIDEO ACCESSORIES

Equipment

Brand

Model number

Number of original remote

Code

## VCR

Equipment

Brand

Model number

Number of original remote

Code

Country	Phone number	Tariff
België/Belgique/Belgien	070 253 011	€ 0,17
Danmark	35258758	Local tariff
France	08 9165 0007	€ 0,23
Deutschland	0180 5 007 533	€ 0,12
España	902 889 343	€ 0,15
Ελλάδα	00800 3122 1219	Local tariff
Ireland	01 6011158	Local tariff
Italia	199 404 043	€ 0.25
Luxembourg	40 6661 5645	Local tariff
Nederland	0900 0400 062	€ 0,20
Norge	22 70 82 58	Local tariff
Österreich	0820 901116	Local tariff
Portugal	2 1359 1441	Local tariff
Suomi	09 2294 8258	Local tariff
Sverige	08 7505196	Local tariff
Suisse/die Schweiz/Svizzera	01 212 0045	Local tariff
United Kingdom	0906 1010 018	£ 0.15

## Information to the Consumer

### Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.





